



Switch off the machine and disconnect the device from mains before cleaning.



Use a soft cloth with alcohol based cleaner for disinfection. Wipe parts

users touch.



Surfaces
must be
dry before
plugging in
and powering
back on.



Never spray disinfectant directly onto the device, always use a cloth to prevent liquid entering the device causing damage.



Depending on disinfectant used, the printer exterior may be discoloured, however, the printer functions will not be affected.




Cleaning products such as wet wipes may contain non-alcoholic compositions and therefore, are not recommended for use.



It is recommended to use a cleaner that contains a minimum of 60% alcohol.



These cleaning guidelines do not guarantee effectiveness against coronavirus.

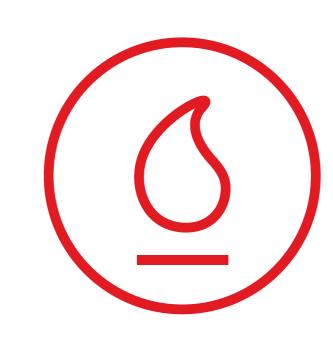

Note that alcohol is a flammable liquid. Never use it near a fire.

Canon