



| Printer Type                  | Canon Printers                |
|-------------------------------|-------------------------------|
| imageFORCE                    | imageFORCE C7165              |
|                               |                               |
|                               |                               |
|                               |                               |
| imageRUNNER ADVANCE           | imageRUNNER ADVANCE DX C3930i |
|                               | imageRUNNER ADVANCE DX C3926i |
|                               | imageRUNNER ADVANCE DX C359P  |
|                               | imageRUNNER ADVANCE DX C3935i |
|                               | imageRUNNER ADVANCE DX C3922i |
|                               | imageRUNNER ADVANCE DX C259i  |
|                               | imageRUNNER ADVANCE DX C359i  |
|                               | imageRUNNER ADVANCE DX 4925i  |
|                               | imageRUNNER ADVANCE DX 8905P  |
|                               | imageRUNNER ADVANCE DX 8905i  |
|                               | imageRUNNER ADVANCE DX 6980i  |
|                               | imageRUNNER ADVANCE DX 4945i  |
|                               | imageRUNNER ADVANCE DX 719iZ  |
|                               | imageRUNNER ADVANCE DX 4935i  |
|                               | imageRUNNER ADVANCE DX 619i   |
|                               | imageRUNNER ADVANCE DX 8995i  |
|                               | imageRUNNER ADVANCE DX 8986P  |
|                               | imageRUNNER ADVANCE DX 8986i  |
|                               | imageRUNNER ADVANCE DX 529iZ  |
|                               | imageRUNNER ADVANCE DX 619iZ  |
|                               | imageRUNNER ADVANCE DX 719i   |
|                               | imageRUNNER ADVANCE DX 8995P  |
|                               | imageRUNNER ADVANCE DX 529i   |
|                               | imageRUNNER ADVANCE DX 4825i  |
|                               | imageRUNNER ADVANCE DX 4835i  |
|                               | imageRUNNER ADVANCE DX 4845i  |
|                               | imageRUNNER ADVANCE DX 6855i  |
|                               | imageRUNNER ADVANCE DX C3830i |
|                               | imageRUNNER ADVANCE DX C3826i |
|                               | imageRUNNER ADVANCE DX C3835i |
|                               | imageRUNNER ADVANCE DX C3822i |
|                               | imageRUNNER ADVANCE DX 6870i  |
|                               | imageRUNNER ADVANCE DX 6860i  |
|                               | imageRUNNER ADVANCE DX C478iZ |
|                               | imageRUNNER ADVANCE DX C478i  |
|                               | imageRUNNER ADVANCE DX C5740i |
|                               | imageRUNNER ADVANCE C355P     |
|                               | imageRUNNER ADVANCE 4225i     |
|                               | imageRUNNER ADVANCE DX C257   |
|                               | imageRUNNER ADVANCE DX C357   |
| imageRUNNER ADVANCE DX 6000i  |                               |
| imageRUNNER ADVANCE DX C5750i |                               |
| imageRUNNER ADVANCE 500i      |                               |
| imageRUNNER ADVANCE 400i      |                               |

|  |
|--|
| imageRUNNER ADVANCE DX C5735i            |
| imageRUNNER ADVANCE DX 6755i             |
| imageRUNNER ADVANCE DX 6780i             |
| imageRUNNER ADVANCE DX 6765i             |
| imageRUNNER ADVANCE DX C5760i            |
| imageRUNNER ADVANCE DX 6755PRT           |
| imageRUNNER ADVANCE DX C7770i            |
| imageRUNNER ADVANCE DX C7780i            |
| imageRUNNER ADVANCE DX C3730i            |
| imageRUNNER ADVANCE DX C7765i            |
| imageRUNNER ADVANCE DX C3720i            |
| imageRUNNER ADVANCE DX C3725i            |
| imageRUNNER ADVANCE DX 4751i             |
| imageRUNNER ADVANCE DX 4745i             |
| imageRUNNER ADVANCE DX 4735i             |
| imageRUNNER ADVANCE DX 4725i             |
| imageRUNNER ADVANCE DX 8786P/8795P/8705P |
| imageRUNNER ADVANCE DX 8786i/8795i/8705i |
| imageRUNNER ADVANCE C7270i               |
| imageRUNNER ADVANCE C7260i               |
| imageRUNNER ADVANCE C7280i               |
| imageRUNNER ADVANCE C255i                |
| imageRUNNER ADVANCE C355i                |
| imageRUNNER ADVANCE C355iFC              |
| imageRUNNER ADVANCE 4251i                |
| imageRUNNER ADVANCE C7570i III           |
| imageRUNNER ADVANCE 4245i                |
| imageRUNNER ADVANCE 4235i                |
| imageRUNNER ADVANCE C5240i               |
| imageRUNNER ADVANCE C5235i               |
| imageRUNNER ADVANCE C5255i               |
| imageRUNNER ADVANCE C5255                |
| imageRUNNER ADVANCE C5250                |
| imageRUNNER ADVANCE C5250i               |
| EQ80 imageRUNNER ADVANCE 6065i           |
| EQ80 imageRUNNER ADVANCE C5051i D        |
| EQ80 imageRUNNER ADVANCE C5035i          |
| imageRUNNER ADVANCE C3320                |
| imageRUNNER ADVANCE C3320i               |
| imageRUNNER ADVANCE C3325i               |
| imageRUNNER ADVANCE C3330i               |
| imageRUNNER ADVANCE 4045i                |
| imageRUNNER ADVANCE 4025i                |
| imageRUNNER ADVANCE C7565i III           |
| imageRUNNER ADVANCE C7580i III           |
| imageRUNNER ADVANCE C2220L               |
| imageRUNNER ADVANCE 4535i II             |
| imageRUNNER ADVANCE 4525i II             |
| imageRUNNER ADVANCE 4551i II             |
| imageRUNNER ADVANCE 4545i II             |
| imageRUNNER ADVANCE 6575i                |
| imageRUNNER ADVANCE 6555i                |
| imageRUNNER ADVANCE 6565i                |
| imageRUNNER ADVANCE 6555iPRT             |
| imageRUNNER ADVANCE 6575i II             |
| imageRUNNER ADVANCE 6565i II             |
| imageRUNNER ADVANCE 6555i II             |

|                                 |
|---------------------------------|
| imageRUNNER ADVANCE 6555iPRT II |
| imageRUNNER ADVANCE C350P       |
| imageRUNNER ADVANCE C250i       |
| imageRUNNER ADVANCE C350i       |
| imageRUNNER ADVANCE 4525i III   |
| imageRUNNER ADVANCE C9280 PRO   |
| imageRUNNER ADVANCE C9070 PRO   |
| imageRUNNER ADVANCE C9070S PRO  |
| imageRUNNER ADVANCE C9060 PRO   |
| imageRUNNER ADVANCE C9060S PRO  |
| imageRUNNER ADVANCE 615iZ III   |
| imageRUNNER ADVANCE 525i III    |
| imageRUNNER ADVANCE 715i III    |
| imageRUNNER ADVANCE 715iZ III   |
| imageRUNNER Advance 8595 III    |
| imageRUNNER ADVANCE C3520i III  |
| imageRUNNER Advance 8585 III    |
| imageRUNNER Advance 8505 III    |
| imageRUNNER ADVANCE 615i III    |
| imageRUNNER ADVANCE 525iZ III   |
| imageRUNNER ADVANCE C3525i III  |
| imageRUNNER ADVANCE C3530i III  |
| imageRUNNER ADVANCE C475iZ III  |
| imageRUNNER ADVANCE C475i III   |
| imageRUNNER ADVANCE 6565i III   |
| imageRUNNER ADVANCE 6575i III   |
| imageRUNNER ADVANCE 6555i III   |
| imageRUNNER ADVANCE 6555PRT III |
| ImageRUNNER ADVANCE C356i III   |
| imageRUNNER ADVANCE C356P III   |
| imageRUNNER ADVANCE C256i III   |
| Canon imageRUNNER ADVANCE 6265i |
| Canon imageRUNNER ADVANCE 6255i |
| Canon imageRUNNER ADVANCE C256i |
| Canon imageRUNNER ADVANCE C356i |
| Canon imageRUNNER ADVANCE C356P |
| imageRUNNER Advance 4551i III   |
| imageRUNNER ADVANCE 4535i III   |
| imageRUNNER Advance 4545i III   |
| imageRUNNER ADVANCE C5535i III  |
| imageRUNNER ADVANCE C5540i III  |
| imageRUNNER ADVANCE C5550i III  |
| imageRUNNER ADVANCE C5560i III  |
| imageRUNNER ADVANCE DX C357P    |
| imageRUNNER ADVANCE DX 717iZ    |
| imageRUNNER ADVANCE DX 617iZ    |
| imageRUNNER ADVANCE DX 527iZ    |
| imageRUNNER ADVANCE DX 617i     |
| imageRUNNER ADVANCE DX 717i     |
| imageRUNNER ADVANCE DX 527i     |
| imageRUNNER ADVANCE DX C5870i   |
| imageRUNNER ADVANCE DX C5840i   |
| imageRUNNER ADVANCE DX C5860i   |
| imageRUNNER ADVANCE DX C5850i   |

|                                  |                         |                  |
|----------------------------------|-------------------------|------------------|
| imageRUNNER                      | imageRUNNER C3326i      |                  |
|                                  | imageRUNNER 2930i       |                  |
|                                  | imageRUNNER 2925i       |                  |
|                                  | imageRUNNER 2945i       |                  |
|                                  | imageRUNNER 2745i       |                  |
|                                  | imageRUNNER 2730i       |                  |
|                                  | imageRUNNER 2725i       |                  |
|                                  | imageRUNNER 1643iF II   |                  |
|                                  | imageRUNNER 1643i II    |                  |
|                                  | imageRUNNER C3226i      |                  |
|                                  | imageRUNNER C1533iF     |                  |
|                                  | imageRUNNER C1538iF     |                  |
|                                  | Canon imageRUNNER 1435i |                  |
|                                  | i-SENSYS                | i-SENSYS MF463dw |
|                                  |                         | i-SENSYS MF465dw |
| i-SENSYS MF461dw                 |                         |                  |
| i-SENSYS LBP246dw                |                         |                  |
| i-SENSYS LBP243dw                |                         |                  |
| i-SENSYS MF287dw                 |                         |                  |
| i-SENSYS X 1440i                 |                         |                  |
| i-SENSYS X 1440iF                |                         |                  |
| i-SENSYS X 1440P                 |                         |                  |
| i-SENSYS X 1440Pr                |                         |                  |
| i-SENSYS X C1533iF II/C1538iF II |                         |                  |
| i-SENSYS X C1538P II/C1533P II   |                         |                  |
| i-SENSYS X C1946P                |                         |                  |
| i-SENSYS X 1861P                 |                         |                  |
| i-SENSYS X 1871P                 |                         |                  |
| i-SENSYS X C1333iF               |                         |                  |
| i-SENSYS X C1333i                |                         |                  |
| i-SENSYS X C1333P                |                         |                  |
| i-SENSYS X 1238i II              |                         |                  |
| i-SENSYS X 1238iF II             |                         |                  |
| i-SENSYS X 1238P II              |                         |                  |
| i-SENSYS X 1238Pr II             |                         |                  |
| i-SENSYS X C1538P                |                         |                  |
| i-SENSYS X C1533P                |                         |                  |
| Canon i-SENSYS X 1238Pr          |                         |                  |
| Canon i-SENSYS X 1238iF          |                         |                  |
| Canon i-SENSYS X 1238i           |                         |                  |
| Canon i-SENSYS X C1127i          |                         |                  |
| Canon i-SENSYS X 1643P           |                         |                  |
| Canon i-SENSYS X 1238P           |                         |                  |
| Canon i-SENSYS X C1127iF         |                         |                  |
| Canon i-SENSYS X C1127P          |                         |                  |
| i-SENSYS LBP710Cx                |                         |                  |
| i-SENSYS LBP253x                 |                         |                  |
| i-SENSYS MF724Cdw                |                         |                  |
| i-SENSYS LBP252dw                |                         |                  |
| i-SENSYS LBP351x                 |                         |                  |
| i-SENSYS LBP352x                 |                         |                  |
| i-SENSYS MF416dw                 |                         |                  |
| i-SENSYS MF515x                  |                         |                  |
| i-SENSYS MF419x                  |                         |                  |
| i-SENSYS LBP7660Cdn              |                         |                  |
| i-SENSYS LBP712Cx                |                         |                  |
| i-SENSYS LBP251dw                |                         |                  |

|              |                          |
|--------------|--------------------------|
|              | i-SENSYS MF512x          |
|              | i-SENSYS MF418x          |
|              | i-SENSYS MF728Cdw        |
|              | i-SENSYS MF729Cx         |
|              | i-SENSYS MF645Cx         |
|              | i-SENSYS MF657Cdw        |
|              | i-SENSYS LBP361dw        |
|              | i-SENSYS MF752Cdw        |
|              | i-SENSYS MF754Cdw        |
|              | i-SENSYS LBP673Cdw       |
|              | i-SENSYS LBP852Cx        |
|              | i-SENSYS MF552dw         |
|              | i-SENSYS MF553dw         |
|              | i-SENSYS MF455dw         |
|              | i-SENSYS MF453dw         |
|              | i-SENSYS LBP722Cdw       |
|              | i-SENSYS MF832Cdw        |
|              | i-SENSYS MF742Cdw        |
|              | i-SENSYS MF744Cdw        |
|              | i-SENSYS MF411dw         |
|              | i-SENSYS MF628Cw         |
|              | i-SENSYS MF623Cn         |
|              | i-SENSYS LBP223dw        |
|              | i-SENSYS LBP226dw        |
|              | i-SENSYS LBP228x         |
|              | i-SENSYS LBP325x         |
|              | i-SENSYS LBP7780Cx       |
|              | i-SENSYS LBP6780x        |
|              | i-SENSYS LBP312x         |
|              | Canon i-SENSYS LBP7680Cx |
|              | i-SENSYS LBP6670dn       |
|              | Canon i-SENSYS LBP5360   |
| imagePRESS   | imagePRESS C265          |
|              | imagePRESS C270          |
|              | imagePRESS C165          |
|              | Canon imagePRESS C600i   |
| imagePROGRAF | imagePROGRAF TZ-32000    |
|              | imagePROGRAF TX-2200     |
|              | imagePROGRAF TX-3200     |
|              | imagePROGRAF TX-4200     |
|              | imagePROGRAF PRO-2600    |
|              | imagePROGRAF PRO-4600    |
|              | imagePROGRAF PRO-6600    |
|              | imagePROGRAF GP-2600S    |
|              | imagePROGRAF GP-4600S    |
|              | imagePROGRAF GP-6600S    |
|              | imagePROGRAF TM-240      |
|              | imagePROGRAF TM-255      |
|              | imagePROGRAF TM-350      |
|              | imagePROGRAF TM-340      |
|              | imagePROGRAF TM-355      |
|              | imagePROGRAF TC-20       |
|              | imagePROGRAF TM-305      |
|              | imagePROGRAF TM-300      |
|              | imagePROGRAF GP-300      |
|              | imagePROGRAF GP-200      |
|              | imagePROGRAF GP-2000     |

|  |                                  |
|--|----------------------------------|
|  | <b>imagePROGRAF GP-4000</b>      |
|  | <b>imagePROGRAF TX-4000</b>      |
|  | <b>imagePROGRAF TX-3000</b>      |
|  | <b>imagePROGRAF TZ-30000</b>     |
|  | <b>imagePROGRAF TX-4100</b>      |
|  | <b>imagePROGRAF TX-3100</b>      |
|  | <b>imagePROGRAF TX-2100</b>      |
|  | <b>imagePROGRAF TX-2000</b>      |
|  | <b>imagePROGRAF PRO-6100</b>     |
|  | <b>imagePROGRAF PRO-6100S</b>    |
|  | <b>imagePROGRAF PRO-4100S</b>    |
|  | <b>imagePROGRAF PRO-4100</b>     |
|  | <b>imagePROGRAF PRO-2100</b>     |
|  | <b>Canon imagePROGRAF iPF770</b> |
|  | <b>Canon imagePROGRAF iPF510</b> |
|  | <b>Canon imagePROGRAF iPF840</b> |
|  | <b>Canon imagePROGRAF iPF830</b> |
|  | <b>Canon imagePROGRAF iPF780</b> |
|  | <b>Canon imagePROGRAF iPF670</b> |
|  | <b>Canon imagePROGRAF iPF785</b> |
|  | <b>Canon imagePROGRAF iPF850</b> |
|  | <b>imagePROGRAF TM-200</b>       |
|  | <b>imagePROGRAF TM-205</b>       |



| Driver Type  | Canon Printer Drivers   |   |
|--|---|---|
| Generic PCL6 Printer Driver  | Generic Plus PCL6 Printer Driver V3.00                            |   |
|  | Generic Plus PCL6 Printer Driver V2.90                            |   |
|  | Generic Plus PCL6 Printer Driver V2.72                            |   |
|  | Generic Plus PCL6 Printer Driver V2.60                            |   |
|  | Generic Plus PCL6 Printer Driver V2.50                            |   |
|  | Generic Plus PCL6 Printer Driver V2.40                            |   |
|  | Generic Plus PCL6 Printer Driver v2.21                            |   |
|  | Generic Plus PCL6 Printer Driver V2.20                            |   |
|  | Canon Generic PCL6 Printer Driver (x86 and x64) v3.10             |   |
|  | Canon PCL6 Printer Driver (x86 and x64) v21.85                    |   |
|  | Generic Plus PCL6 Printer Driver V2.30                            |   |
|  | Generic Plus PS3 Printer Driver V3.02                             |   |
|  | Generic Plus PS3 Printer Driver                                   | Generic Plus PS3 Printer Driver V2.90   |
| Generic Plus PS3 Printer Driver V2.72  |   |   |
| Generic Plus PS3 Printer Driver V2.60  |   |   |
| Generic Plus PS3 Printer Driver V2.50  |   |   |
| Generic Plus PS3 Printer Driver V2.40  |   |   |
| Generic Plus UFR II Printer Driver V3.00   |   |   |
| Generic Plus UFR II Printer Driver   | Generic Plus UFR II Printer Driver V2.90                          |   |
|  | Canon Generic UFR II Printer Driver V2.20 [Windows 32bit & 64bit] |   |
|  | Generic Plus UFR II Printer Driver V2.72                          |   |
|  | Generic Plus UFR II Printer Driver V2.60                          |   |
|  | Generic Plus UFR II Printer Driver V2.50                          |   |
|  | Generic Plus UFR II Printer Driver V2.40                          |   |
|  | Canon Generic Plus UFR II Printer Driver V2.21                    |   |
|  | Generic Plus UFR II Printer Driver V2.30                          |   |
|  | imagePROGRAF Printer Driver                                       | imagePROGRAF TX-2200 / TX-3200 / TX-4200 / TZ-32000 Printer Driver Ver.6.21 (Windows) |
|  |   | imagePROGRAF PRO-2600 / PRO-4600 / PRO-6600 Printer Driver Ver.6.10 (Windows)         |
| imagePROGRAF GP-2600S / GP-4600S / GP-6600S Printer Driver Ver.6.10 (Windows)    |   |   |
| TM-240/250/255/340/350/355 Printer Driver Ver.6.00b                              |   |   |
| TC-20 Printer Driver v5.90   |   |   |
| imagePROGRAF TM-200 / TM-205 / TM-300 / TM-305 series Printer Driver             |   |   |
| GP-200 / GP-300 Printer Driver Ver.5.70 (Windows)                                |   |   |
| GP-2000 / GP-4000 Printer Driver Ver.5.80 (Windows)                              |   |   |
| imagePROGRAF TX-2000 / TX-3000 / TX-4000 series Printer Driver                   |   |   |
| TX-2100 / TX-3100 / TX-4100 / TZ-30000 /series Printer Driver Ver.5.60 (Windows) |   |   |
| imagePROGRAF TX-2000 / TX-3000 / TX-4000 series Printer Driver Ver.1.21          |   |   |
| imagePROGRAF PRO-4100S / PRO-6100S series Printer Driver                         |   |   |
| imagePROGRAF PRO-2100 / PRO-4100 / PRO-6100 series Printer Driver                |   |   |
| Canon imagePROGRAF iPF510 Printer Driver for Windows                             |   |   |
| Canon iPF 785 Printer Driver for Windows v4.90                                   |   |   |
| Canon iPF 780 Printer Driver for Windows v4.90                                   |   |   |
| Canon imagePROGRAF iPF670 Printer Driver for Windows                             |   |   |
| Canon imagePROGRAF iPF770 Printer Driver for Windows                             |   |   |
| Canon imagePROGRAF TX-2000 / TX-3000 / TX-4000 series Printer Driver             |   |   |
| Canon imagePROGRAF iPF850 Printer Driver for Windows (64bit)                     |   |   |
| Canon imagePROGRAF iPF830 Printer Driver for Windows (64bit)                     |   |   |
| Canon imagePROGRAF iPF840 Printer Driver for Windows (64bit)                     |   |   |
| Canon imagePROGRAF iPF780 Printer Driver for Windows (64bit)                     |   |   |
| Canon imagePROGRAF iPF770 Printer Driver for Windows (64bit)                     |   |   |
| Canon imagePROGRAF iPF510 Printer Driver for Windows (64bit)                     |   |   |
| Canon imagePROGRAF iPF785 Printer Driver for Windows (64bit)                     |   |   |
| Canon imagePROGRAF iPF670 Printer Driver for Windows (64bit)                     |   |   |

|                                |  |
|--------------------------------|--|
| uniFLOW Universal PCLXL Driver | uniFLOW Universal PCLXL Driver v2024 LTS   |
|                                | uniFLOW Universal PCLXL Driver v2022 LTS   |
|                                | uniFLOW Universal PCLXL Driver v2021 LTS   |
|                                | uniFLOW Universal PCLXL Driver v5.4  |
| uniFLOW Universal PS Driver    | uniFLOW Universal PS Driver v2024 LTS  |
|                                | uniFLOW Universal PS Driver v2022 LTS  |
|                                | uniFLOW Universal PS Driver v2021 LTS  |
|                                | uniFLOW Universal PS Driver v5.4   |
| Others                         | Canon PostScript 3 Printer Driver V30.00 [Windows 32bit & 64bit]<br>Driver Select Ver.2.17.0 |
|                                | Canon PS Printer Driver v20.90   |
|                                | Canon PS Printer Driver (x86 and x64) v21.52   |
|                                |  |



| Canon Scanners                                 |                            |
|--|----------------------------|
|  | imageFORMULA DR-M140II     |
|  | imageFORMULA DR-M1060II    |
|  | imageFORMULA DR-S350N      |
|  | imageFORMULA DR-S250N      |
|  | imageFORMULA DR-C225       |
|  | imageFORMULA DR-C225W      |
|  | imageFORMULA DR-C225 II    |
|  | imageFORMULA DR-C225W II   |
|  | imageFORMULA DR-2580C      |
|  | imageFORMULA P-208II       |
|  | imageFORMULA DR-6030C      |
|  | imageFORMULA DR-M160       |
|  | imageFORMULA DR-M160II     |
|  | imageFORMULA P-215         |
|  | imageFORMULA DR-M260       |
|  | imageFORMULA DR-M1060      |
|  | imageFORMULA DR-3010C      |
|  | imageFORMULA DR-C125       |
|  | imageFORMULA DR-2010C      |
|  | imageFORMULA DR-G1100      |
|  | imageFORMULA DR-C130       |
|  | imageFORMULA DR-C120       |
|  | imageFORMULA DR-F120       |
|  | imageFORMULA P-208         |
|  | imageFORMULA P-215II       |
|  | imageFORMULA DR-C240       |
|  | imageFORMULA DR-G1130      |
|  | imageFORMULA DR-S150       |
|  | imageFORMULA P-150         |
|  | imageFORMULA DR-4010C      |
|  | imageFORMULA DR-6010C      |
|  | imageFORMULA DR-M140       |
|  | imageFORMULA DR-G2110      |
|  | Canon imageFORMULA DR-C230 |
| Canon imageFORMULA DR-C225 / DR-C225W Scanners |                            |
|  | imageFORMULA DR-G2140      |
|  | imageFORMULA DR-G2090      |



Ready

Canon

| Canon Scanner Drivers  |
|--|
| ISIS & TWAIN Driver for DR-M140II v1.0.12209 SP1                   |
| ISIS / TWAIN / WIA Driver for DR-M1060 v1.2.11803.9001 SP3         |
| ISIS & TWAIN Driver for DR-S250N v1.0.12305 SP5                    |
| Canon imageFORMULA DR-C225 & DR-C225W Scanner Driver               |
| ISIS & TWAIN Driver for Canon DR-G1100 v1.2 SP4                    |
| Canon imageFORMULA DR-M160 & DR-M160II Driver for Windows v1.2 SP4 |
| imageFORMULA P-215 ISIS & TWAIN Driver                             |
| imageFORMULA P-208II ISIS & TWAIN Driver                           |
| imageFORMULA M160 & M160II ISIS & TWAIN Driver                     |
| imageFORMULA P-215II ISIS & TWAIN Driver                           |
| imageFORMULA P-150 & P150M ISIS & TWAIN Driver                     |
| imageFORMULA DR-2010C ISIS & TWAIN Driver                          |
| imageFORMULA DR-S150 ISIS & TWAIN Driver                           |
| imageFORMULA DR-2580C ISIS & TWAIN Driver                          |
| imageFORMULA DR-6010C ISIS & TWAIN Driver                          |
| imageFORMULA DR-4010C ISIS & TWAIN Driver                          |
| Canon DR-C125 ISIS & TWAIN Driver v1.2 for SP6 Windows             |
| imageFORMULA DR-C125 ISIS & TWAIN Driver                           |
| imageFORMULA DR-C130 ISIS & TWAIN Driver                           |
| imageFORMULA DR-3010C ISIS & TWAIN Driver                          |
| imageFORMULA P-208 ISIS & TWAIN Driver                             |
| imageFORMULA DR-G1130 ISIS & TWAIN Driver                          |
| imageFORMULA DR-2510C ISIS & TWAIN Driver                          |
| imageFORMULA DR-G1100 ISIS & TWAIN Driver                          |
| imageFORMULA DR-C225 & DR-C225W ISIS & TWAIN Driver                |
| imageFORMULA DR-M140 ISIS/TWAIN/WIA Driver                         |
| imageFORMULA DR-M1060 ISIS/TWAIN/WIA Driver                        |
| imageFORMULA DR-C240 ISIS/TWAIN/WIA Driver                         |
| imageFORMULA DR-F120 ISIS & TWAIN Driver                           |
| imageFORMULA DR-6030C ISIS/TWAIN/WIA Driver                        |
| ISIS/TWAIN/WIA Driver for Canon imageFORMULA DR-C230               |
| ISIS/TWAIN/WIA Driver for Canon imageFORMULA DR-M260               |
| Canon DR-6030C Scanner ISIS / TWAIN Driver v1.2 for Windows SP2    |
| Canon DR-G2000 Series ISIS-TWAIN-WIA Driver                        |