

# KOMPATIBLE SKRIVERE

## imagePROGRAF-serien

imagePROGRAF TC-20	imagePROGRAF TX-3100	imagePROGRAF iPF685	imagePROGRAF iPF8300
imagePROGRAF TC-20M	imagePROGRAF TX-3100 MFP Z36	imagePROGRAF iPF700	imagePROGRAF iPF8300S
imagePROGRAF GP-200	imagePROGRAF TX-4000	imagePROGRAF iPF710	imagePROGRAF iPF840
imagePROGRAF GP-2000	imagePROGRAF TX-4000 MFP T36	imagePROGRAF iPF720	imagePROGRAF iPF840 MFP M40
imagePROGRAF GP-300	imagePROGRAF TX-4100	imagePROGRAF iPF750	imagePROGRAF iPF8400
imagePROGRAF GP-4000	imagePROGRAF TX-4100 MFP Z36	imagePROGRAF iPF750 M40 MFP	imagePROGRAF iPF8400S
imagePROGRAF PRO-2000	imagePROGRAF TZ-30000	imagePROGRAF iPF755	imagePROGRAF iPF8400SE
imagePROGRAF PRO-2100	imagePROGRAF TZ-30000 MFP Z36	imagePROGRAF iPF755 M40 MFP	imagePROGRAF iPF850
imagePROGRAF PRO-4000	imagePROGRAF iPF500	imagePROGRAF iPF760	imagePROGRAF iPF850 MFP M40
imagePROGRAF PRO-4000S	imagePROGRAF iPF5000	imagePROGRAF iPF760 M40 MFP	imagePROGRAF iPF9000
imagePROGRAF PRO-4100	imagePROGRAF iPF510	imagePROGRAF iPF765	imagePROGRAF iPF9000S
imagePROGRAF PRO-4100S	imagePROGRAF iPF5100	imagePROGRAF iPF765 M40 MFP	imagePROGRAF iPF9100
imagePROGRAF PRO-6000	imagePROGRAF iPF600	imagePROGRAF iPF770	imagePROGRAF iPF9400
imagePROGRAF PRO-6000S	imagePROGRAF iPF6000S	imagePROGRAF iPF770 MFP L36	imagePROGRAF iPF9400S
imagePROGRAF PRO-6100	imagePROGRAF iPF605	imagePROGRAF iPF770 MFP L36e	imagePROGRAF PRO-1000
imagePROGRAF PRO-6100S	imagePROGRAF iPF610	imagePROGRAF iPF770 MFP M40	imagePROGRAF PRO-300
imagePROGRAF TA-20	imagePROGRAF iPF6100	imagePROGRAF iPF780	
imagePROGRAF TA-30	imagePROGRAF iPF6200	imagePROGRAF iPF780 MFP M40	
imagePROGRAF TM-200	imagePROGRAF iPF6300	imagePROGRAF iPF785	
imagePROGRAF TM-200 MFP L24ei	imagePROGRAF iPF6300S	imagePROGRAF iPF785 MFP M40	
imagePROGRAF TM-205	imagePROGRAF iPF6350	imagePROGRAF iPF8000	
imagePROGRAF TM-300	imagePROGRAF iPF6400	imagePROGRAF iPF8000S	
imagePROGRAF TM-300 MFP L36ei	imagePROGRAF iPF6400S	imagePROGRAF iPF810	
imagePROGRAF TM-300 MFP Z36	imagePROGRAF iPF6400SE	imagePROGRAF iPF8100	
imagePROGRAF TM-305	imagePROGRAF iPF6450	imagePROGRAF iPF815	
imagePROGRAF TM-305 MFP T36	imagePROGRAF iPF650	imagePROGRAF iPF815 M40 MFP	
imagePROGRAF TM-305 MFP Z36	imagePROGRAF iPF655	imagePROGRAF iPF820	
imagePROGRAF TX-2000	imagePROGRAF iPF670	imagePROGRAF iPF825	
imagePROGRAF TX-2100	imagePROGRAF iPF670 MFP L24	imagePROGRAF iPF825 M40 MFP	
imagePROGRAF TX-3000	imagePROGRAF iPF670 MFP L24e	imagePROGRAF iPF830	
imagePROGRAF TX-3000 MFP T36	imagePROGRAF iPF680	imagePROGRAF iPF830 MFP M40	

# KOMPATIBLE SKRIVERE

## PIXMA-serien

PIXMA E204	PIXMA G2570	PIXMA G6045	PIXMA MG7751
PIXMA E304	PIXMA G3400	PIXMA G6050	PIXMA MG7752
PIXMA E3140	PIXMA G3410	PIXMA G6055	PIXMA MG7753
PIXMA E3340	PIXMA G3415	PIXMA G640	PIXMA PRO-200
PIXMA E3440	PIXMA G3420	PIXMA G650	PIXMA TR150
PIXMA E414	PIXMA G3430	PIXMA G7040	PIXMA TR4540
PIXMA E4240	PIXMA G3460	PIXMA G7045	PIXMA TR4550
PIXMA E474	PIXMA G3470	PIXMA G7050	PIXMA TR4551
PIXMA G1400	PIXMA G3500	PIXMA G7055	PIXMA TR4640
PIXMA G1410	PIXMA G3501	PIXMA GM2050	PIXMA TR4650
PIXMA G1411	PIXMA G3510	PIXMA GM4040	PIXMA TR4750i
PIXMA G1420	PIXMA G3520	PIXMA GM4050	PIXMA TR4751i
PIXMA G1430	PIXMA G3560	PIXMA MG3040	PIXMA TR7540
PIXMA G1500	PIXMA G3570	PIXMA MG3050	PIXMA TR7550
PIXMA G1501	PIXMA G3571	PIXMA MG3051	PIXMA TR8540
PIXMA G1510	PIXMA G3572	PIXMA MG3052	PIXMA TR8550
PIXMA G1520	PIXMA G4400	PIXMA MG3053	PIXMA TS204
PIXMA G1530	PIXMA G4410	PIXMA MG3640	PIXMA TS205
PIXMA G2400	PIXMA G4470	PIXMA MG3650	PIXMA TS304
PIXMA G2410	PIXMA G4411	PIXMA MG5740	PIXMA TS305
PIXMA G2411	PIXMA G4500	PIXMA MG5750	PIXMA TS3140
PIXMA G2415	PIXMA G4510	PIXMA MG5751	PIXMA TS3150
PIXMA G2420	PIXMA G4570	PIXMA MG5752	PIXMA TS3151
PIXMA G2430	PIXMA G4511	PIXMA MG5753	PIXMA TS3340
PIXMA G2460	PIXMA G5040	PIXMA MG6840	PIXMA TS3350
PIXMA G2470	PIXMA G5045	PIXMA MG6850	PIXMA TS3351
PIXMA G2500	PIXMA G5050	PIXMA MG6851	PIXMA TS3352
PIXMA G2501	PIXMA G5055	PIXMA MG6852	PIXMA TS3355
PIXMA G2510	PIXMA G540	PIXMA MG6853	PIXMA TS3440
PIXMA G2520	PIXMA G550	PIXMA MG7740	PIXMA TS3450
PIXMA G2560	PIXMA G6040	PIXMA MG7750	PIXMA TS3451

# KOMPATIBLE SKRIVERE

## PIXMA-serien

PIXMA TS3452	PIXMA TS5353	PIXMA TS704a	PIXMA TS8251
PIXMA TS3550i	PIXMA TS5353a	PIXMA TS705	PIXMA TS8252
PIXMA TS3551i	PIXMA TS5355	PIXMA TS705a	PIXMA TS8340
PIXMA TS5040	PIXMA TS5355a	PIXMA TS7440	PIXMA TS8340a
PIXMA TS5050	PIXMA TS6040	PIXMA TS7440a	PIXMA TS8350
PIXMA TS5051	PIXMA TS6050	PIXMA TS7450	PIXMA TS8350a
PIXMA TS5053	PIXMA TS6051	PIXMA TS7450a	PIXMA TS8351
PIXMA TS5055	PIXMA TS6052	PIXMA TS7450i	PIXMA TS8351a
PIXMA TS5140	PIXMA TS6140	PIXMA TS7451	PIXMA TS8352
PIXMA TS5150	PIXMA TS6150	PIXMA TS7451a	PIXMA TS8352a
PIXMA TS5151	PIXMA TS6151	PIXMA TS7451i	PIXMA TS9040
PIXMA TS5340	PIXMA TS6240	PIXMA TS8040	PIXMA TS9050
PIXMA TS5340a	PIXMA TS6250	PIXMA TS8050	PIXMA TS9055
PIXMA TS5350	PIXMA TS6251	PIXMA TS8051	PIXMA TS9140
PIXMA TS5350a	PIXMA TS6340	PIXMA TS8052	PIXMA TS9150
PIXMA TS5350i	PIXMA TS6340a	PIXMA TS8053	PIXMA TS9155
PIXMA TS5351i	PIXMA TS6350	PIXMA TS8140	PIXMA TS9540
PIXMA TS5351	PIXMA TS6350a	PIXMA TS8150	PIXMA TS9541C
PIXMA TS5351a	PIXMA TS6351	PIXMA TS8151	PIXMA TS9550
PIXMA TS5352	PIXMA TS6351a	PIXMA TS8152	PIXMA TS9551C
PIXMA TS5352a	PIXMA TS704	PIXMA TS8240	

## MAXIFY-serien

MAXIFY GX3040	MAXIFY GX7040	MAXIFY MB2750	MAXIFY MB5450
MAXIFY GX3050	MAXIFY GX7050	MAXIFY MB2755	MAXIFY MB5455
MAXIFY GX4040	MAXIFY MB2140	MAXIFY MB5140	MAXIFY iB4140
MAXIFY GX4050	MAXIFY MB2150	MAXIFY MB5150	MAXIFY iB4150
MAXIFY GX6040	MAXIFY MB2155	MAXIFY MB5155	MAXIFY GX5040
MAXIFY GX6050	MAXIFY MB2740	MAXIFY MB5440	MAXIFY GX5050
MAXIFY GX6050	MAXIFY MB2740	MAXIFY MB5440	MAXIFY GX5050

**Canon**

# KOMPATIBLE SKRIVERE

## imagePRESS-serien

imagePRESS C10000VP*	imagePRESS C265	imagePRESS C810*	imagePRESS V800*
imagePRESS C10010VP*	imagePRESS C270	imagePRESS C9010V*	imagePRESS V900*
imagePRESS C165	imagePRESS C710*	imagePRESS C910*	imagePRESS V1000*
imagePRESS C170	imagePRESS C8000VP*	imagePRESS V700*	imagePRESS V1350*

## imageRUNNER ADVANCE-serien

imageRUNNER ADVANCE C256i	imageRUNNER ADVANCE C3525i	imageRUNNER ADVANCE DX C259i	imageRUNNER ADVANCE DX C5840i
imageRUNNER ADVANCE C356i	imageRUNNER ADVANCE C3530i	imageRUNNER ADVANCE DX C359i	imageRUNNER ADVANCE DX C5850i
imageRUNNER ADVANCE C356P	imageRUNNER ADVANCE DX C3720i	imageRUNNER ADVANCE DX C359P	imageRUNNER ADVANCE DX C5860i
imageRUNNER ADVANCE DX C257i	imageRUNNER ADVANCE DX C3725i	imageRUNNER ADVANCE C5535i	imageRUNNER ADVANCE DX C5870i
imageRUNNER ADVANCE DX C357i	imageRUNNER ADVANCE DX C3730i	imageRUNNER ADVANCE C5540i	imageRUNNER ADVANCE C7565i
imageRUNNER ADVANCE DX C357P	imageRUNNER ADVANCE DX C3822i	imageRUNNER ADVANCE C5550i	imageRUNNER ADVANCE C7570i
imageRUNNER ADVANCE C475i	imageRUNNER ADVANCE DX C3826i	imageRUNNER ADVANCE C5560i	imageRUNNER ADVANCE C7580i
imageRUNNER ADVANCE C475iZ	imageRUNNER ADVANCE DX C3830i	imageRUNNER ADVANCE C5560i ES	imageRUNNER ADVANCE DX C7765i
imageRUNNER ADVANCE DX C477i MFP	imageRUNNER ADVANCE DX C3835i	imageRUNNER ADVANCE C5560i ES+	imageRUNNER ADVANCE DX C7770i
imageRUNNER ADVANCE DX C477iZ MFP	imageRUNNER ADVANCE DX C3922i	imageRUNNER ADVANCE DX C5735i	imageRUNNER ADVANCE DX C7780i
imageRUNNER ADVANCE DX C478i	imageRUNNER ADVANCE DX C3926i	imageRUNNER ADVANCE DX C5740i	
imageRUNNER ADVANCE DX C478iZ	imageRUNNER ADVANCE DX C3930i	imageRUNNER ADVANCE DX C5750i	
imageRUNNER ADVANCE C3520i	imageRUNNER ADVANCE DX C3935i	imageRUNNER ADVANCE DX C5760i	

## imageRUNNER-serien

imageRUNNER C1538iF	imageRUNNER C1533iF	imageRUNNER C3226i	imageRUNNER C3326i
---------------------	---------------------	--------------------	--------------------

Ansvarsfraskrivelse  
\*PRISMAsync støttes ikke

**Canon**

# KOMPATIBLE SKRIVERE

## i-SENSYS- / i-SENSYS X-serien

i-SENSYS LBP722Cdw	i-SENSYS LBP670-serien	i-SENSYS MF832Cdw	i-SENSYS X C1533P
i-SENSYS LBP852Cx	i-SENSYS MF740-serien	i-SENSYS X C1127i-serien	i-SENSYS X C1538P
i-SENSYS LBP620-serien	i-SENSYS MF750-serien	i-SENSYS X C1127P	i-SENSYS X C1946P
i-SENSYS LBP630-serien	i-SENSYS MF640-serien	i-SENSYS X C1333i-serien	
i-SENSYS LBP660-serien	i-SENSYS MF650-serien	i-SENSYS X C1333P	