

СУМІСНІ ПРИНТЕРИ

Серія imagePROGRAF

| | | | |
|-------------------------------|-------------------------------|------------------------------|-----------------------------|
| imagePROGRAF TC-20 | imagePROGRAF TX-3100 | imagePROGRAF iPF685 | imagePROGRAF iPF8300 |
| imagePROGRAF TC-20M | imagePROGRAF TX-3100 MFP Z36 | imagePROGRAF iPF700 | imagePROGRAF iPF8300S |
| imagePROGRAF GP-200 | imagePROGRAF TX-4000 | imagePROGRAF iPF710 | imagePROGRAF iPF840 |
| imagePROGRAF GP-2000 | imagePROGRAF TX-4000 MFP T36 | imagePROGRAF iPF720 | imagePROGRAF iPF840 MFP M40 |
| imagePROGRAF GP-300 | imagePROGRAF TX-4100 | imagePROGRAF iPF750 | imagePROGRAF iPF8400 |
| imagePROGRAF GP-4000 | imagePROGRAF TX-4100 MFP Z36 | imagePROGRAF iPF750 M40 MFP | imagePROGRAF iPF8400S |
| imagePROGRAF PRO-2000 | imagePROGRAF TZ-30000 | imagePROGRAF iPF755 | imagePROGRAF iPF8400SE |
| imagePROGRAF PRO-2100 | imagePROGRAF TZ-30000 MFP Z36 | imagePROGRAF iPF755 M40 MFP | imagePROGRAF iPF850 |
| imagePROGRAF PRO-4000 | imagePROGRAF iPF500 | imagePROGRAF iPF760 | imagePROGRAF iPF850 MFP M40 |
| imagePROGRAF PRO-4000S | imagePROGRAF iPF5000 | imagePROGRAF iPF760 M40 MFP | imagePROGRAF iPF9000 |
| imagePROGRAF PRO-4100 | imagePROGRAF iPF510 | imagePROGRAF iPF765 | imagePROGRAF iPF9000S |
| imagePROGRAF PRO-4100S | imagePROGRAF iPF5100 | imagePROGRAF iPF765 M40 MFP | imagePROGRAF iPF9100 |
| imagePROGRAF PRO-6000 | imagePROGRAF iPF600 | imagePROGRAF iPF770 | imagePROGRAF iPF9400 |
| imagePROGRAF PRO-6000S | imagePROGRAF iPF6000S | imagePROGRAF iPF770 MFP L36 | imagePROGRAF iPF9400S |
| imagePROGRAF PRO-6100 | imagePROGRAF iPF605 | imagePROGRAF iPF770 MFP L36e | imagePROGRAF PRO-1000 |
| imagePROGRAF PRO-6100S | imagePROGRAF iPF610 | imagePROGRAF iPF770 MFP M40 | imagePROGRAF PRO-300 |
| imagePROGRAF TA-20 | imagePROGRAF iPF6100 | imagePROGRAF iPF780 | |
| imagePROGRAF TA-30 | imagePROGRAF iPF6200 | imagePROGRAF iPF780 MFP M40 | |
| imagePROGRAF TM-200 | imagePROGRAF iPF6300 | imagePROGRAF iPF785 | |
| imagePROGRAF TM-200 MFP L24ei | imagePROGRAF iPF6300S | imagePROGRAF iPF785 MFP M40 | |
| imagePROGRAF TM-205 | imagePROGRAF iPF6350 | imagePROGRAF iPF8000 | |
| imagePROGRAF TM-300 | imagePROGRAF iPF6400 | imagePROGRAF iPF8000S | |
| imagePROGRAF TM-300 MFP L36ei | imagePROGRAF iPF6400S | imagePROGRAF iPF810 | |
| imagePROGRAF TM-300 MFP Z36 | imagePROGRAF iPF6400SE | imagePROGRAF iPF8100 | |
| imagePROGRAF TM-305 | imagePROGRAF iPF6450 | imagePROGRAF iPF815 | |
| imagePROGRAF TM-305 MFP T36 | imagePROGRAF iPF650 | imagePROGRAF iPF815 M40 MFP | |
| imagePROGRAF TM-305 MFP Z36 | imagePROGRAF iPF655 | imagePROGRAF iPF820 | |
| imagePROGRAF TX-2000 | imagePROGRAF iPF670 | imagePROGRAF iPF825 | |
| imagePROGRAF TX-2100 | imagePROGRAF iPF670 MFP L24 | imagePROGRAF iPF825 M40 MFP | |
| imagePROGRAF TX-3000 | imagePROGRAF iPF670 MFP L24e | imagePROGRAF iPF830 | |
| imagePROGRAF TX-3000 MFP T36 | imagePROGRAF iPF680 | imagePROGRAF iPF830 MFP M40 | |

СУМІСНІ ПРИНТЕРИ

Серія пристроїв PIXMA

| | | | |
|-------------|-------------|--------------|---------------|
| PIXMA E204 | PIXMA G2570 | PIXMA G6045 | PIXMA MG7751 |
| PIXMA E304 | PIXMA G3400 | PIXMA G6050 | PIXMA MG7752 |
| PIXMA E3140 | PIXMA G3410 | PIXMA G6055 | PIXMA MG7753 |
| PIXMA E3340 | PIXMA G3415 | PIXMA G640 | PIXMA PRO-200 |
| PIXMA E3440 | PIXMA G3420 | PIXMA G650 | PIXMA TR150 |
| PIXMA E414 | PIXMA G3430 | PIXMA G7040 | PIXMA TR4540 |
| PIXMA E4240 | PIXMA G3460 | PIXMA G7045 | PIXMA TR4550 |
| PIXMA E474 | PIXMA G3470 | PIXMA G7050 | PIXMA TR4551 |
| PIXMA G1400 | PIXMA G3500 | PIXMA G7055 | PIXMA TR4640 |
| PIXMA G1410 | PIXMA G3501 | PIXMA GM2050 | PIXMA TR4650 |
| PIXMA G1411 | PIXMA G3510 | PIXMA GM4040 | PIXMA TR4750i |
| PIXMA G1420 | PIXMA G3520 | PIXMA GM4050 | PIXMA TR4751i |
| PIXMA G1430 | PIXMA G3560 | PIXMA MG3040 | PIXMA TR7540 |
| PIXMA G1500 | PIXMA G3570 | PIXMA MG3050 | PIXMA TR7550 |
| PIXMA G1501 | PIXMA G3571 | PIXMA MG3051 | PIXMA TR8540 |
| PIXMA G1510 | PIXMA G3572 | PIXMA MG3052 | PIXMA TR8550 |
| PIXMA G1520 | PIXMA G4400 | PIXMA MG3053 | PIXMA TS204 |
| PIXMA G1530 | PIXMA G4410 | PIXMA MG3640 | PIXMA TS205 |
| PIXMA G2400 | PIXMA G4470 | PIXMA MG3650 | PIXMA TS304 |
| PIXMA G2410 | PIXMA G4411 | PIXMA MG5740 | PIXMA TS305 |
| PIXMA G2411 | PIXMA G4500 | PIXMA MG5750 | PIXMA TS3140 |
| PIXMA G2415 | PIXMA G4510 | PIXMA MG5751 | PIXMA TS3150 |
| PIXMA G2420 | PIXMA G4570 | PIXMA MG5752 | PIXMA TS3151 |
| PIXMA G2430 | PIXMA G4511 | PIXMA MG5753 | PIXMA TS3340 |
| PIXMA G2460 | PIXMA G5040 | PIXMA MG6840 | PIXMA TS3350 |
| PIXMA G2470 | PIXMA G5045 | PIXMA MG6850 | PIXMA TS3351 |
| PIXMA G2500 | PIXMA G5050 | PIXMA MG6851 | PIXMA TS3352 |
| PIXMA G2501 | PIXMA G5055 | PIXMA MG6852 | PIXMA TS3355 |
| PIXMA G2510 | PIXMA G540 | PIXMA MG6853 | PIXMA TS3440 |
| PIXMA G2520 | PIXMA G550 | PIXMA MG7740 | PIXMA TS3450 |
| PIXMA G2560 | PIXMA G6040 | PIXMA MG7750 | PIXMA TS3451 |

СУМІСНІ ПРИНТЕРИ

Серія пристроїв PIXMA

| | | | |
|---------------|---------------|---------------|---------------|
| PIXMA TS3452 | PIXMA TS5353 | PIXMA TS704a | PIXMA TS8251 |
| PIXMA TS3550i | PIXMA TS5353a | PIXMA TS705 | PIXMA TS8252 |
| PIXMA TS3551i | PIXMA TS5355 | PIXMA TS705a | PIXMA TS8340 |
| PIXMA TS5040 | PIXMA TS5355a | PIXMA TS7440 | PIXMA TS8340a |
| PIXMA TS5050 | PIXMA TS6040 | PIXMA TS7440a | PIXMA TS8350 |
| PIXMA TS5051 | PIXMA TS6050 | PIXMA TS7450 | PIXMA TS8350a |
| PIXMA TS5053 | PIXMA TS6051 | PIXMA TS7450a | PIXMA TS8351 |
| PIXMA TS5055 | PIXMA TS6052 | PIXMA TS7450i | PIXMA TS8351a |
| PIXMA TS5140 | PIXMA TS6140 | PIXMA TS7451 | PIXMA TS8352 |
| PIXMA TS5150 | PIXMA TS6150 | PIXMA TS7451a | PIXMA TS8352a |
| PIXMA TS5151 | PIXMA TS6151 | PIXMA TS7451i | PIXMA TS9040 |
| PIXMA TS5340 | PIXMA TS6240 | PIXMA TS8040 | PIXMA TS9050 |
| PIXMA TS5340a | PIXMA TS6250 | PIXMA TS8050 | PIXMA TS9055 |
| PIXMA TS5350 | PIXMA TS6251 | PIXMA TS8051 | PIXMA TS9140 |
| PIXMA TS5350a | PIXMA TS6340 | PIXMA TS8052 | PIXMA TS9150 |
| PIXMA TS5350i | PIXMA TS6340a | PIXMA TS8053 | PIXMA TS9155 |
| PIXMA TS5351i | PIXMA TS6350 | PIXMA TS8140 | PIXMA TS9540 |
| PIXMA TS5351 | PIXMA TS6350a | PIXMA TS8150 | PIXMA TS9541C |
| PIXMA TS5351a | PIXMA TS6351 | PIXMA TS8151 | PIXMA TS9550 |
| PIXMA TS5352 | PIXMA TS6351a | PIXMA TS8152 | PIXMA TS9551C |
| PIXMA TS5352a | PIXMA TS704 | PIXMA TS8240 | |

Серія MAXIFY

| | | | |
|---------------|---------------|---------------|---------------|
| MAXIFY GX3040 | MAXIFY GX7040 | MAXIFY MB2750 | MAXIFY MB5450 |
| MAXIFY GX3050 | MAXIFY GX7050 | MAXIFY MB2755 | MAXIFY MB5455 |
| MAXIFY GX4040 | MAXIFY MB2140 | MAXIFY MB5140 | MAXIFY iB4140 |
| MAXIFY GX4050 | MAXIFY MB2150 | MAXIFY MB5150 | MAXIFY iB4150 |
| MAXIFY GX6040 | MAXIFY MB2155 | MAXIFY MB5155 | MAXIFY GX5040 |
| MAXIFY GX6050 | MAXIFY MB2740 | MAXIFY MB5440 | MAXIFY GX5050 |
| MAXIFY GX6050 | MAXIFY MB2740 | MAXIFY MB5440 | MAXIFY GX5050 |

Canon

СУМІСНІ ПРИНТЕРИ

Серія imagePRESS

| | | | |
|----------------------|---------------------|--------------------|-------------------|
| imagePRESS C10000VP* | imagePRESS C265 | imagePRESS C810* | imagePRESS V800* |
| imagePRESS C10010VP* | imagePRESS C270 | imagePRESS C9010V* | imagePRESS V900* |
| imagePRESS C165 | imagePRESS C710* | imagePRESS C910* | imagePRESS V1000* |
| imagePRESS C170 | imagePRESS C8000VP* | imagePRESS V700* | imagePRESS V1350* |

Серія imageRUNNER ADVANCE

| | | | |
|-----------------------------------|-------------------------------|--------------------------------|-------------------------------|
| imageRUNNER ADVANCE C256i | imageRUNNER ADVANCE C3525i | imageRUNNER ADVANCE DX C259i | imageRUNNER ADVANCE DX C5840i |
| imageRUNNER ADVANCE C356i | imageRUNNER ADVANCE C3530i | imageRUNNER ADVANCE DX C359i | imageRUNNER ADVANCE DX C5850i |
| imageRUNNER ADVANCE C356P | imageRUNNER ADVANCE DX C3720i | imageRUNNER ADVANCE DX C359P | imageRUNNER ADVANCE DX C5860i |
| imageRUNNER ADVANCE DX C257i | imageRUNNER ADVANCE DX C3725i | imageRUNNER ADVANCE C5535i | imageRUNNER ADVANCE DX C5870i |
| imageRUNNER ADVANCE DX C357i | imageRUNNER ADVANCE DX C3730i | imageRUNNER ADVANCE C5540i | imageRUNNER ADVANCE C7565i |
| imageRUNNER ADVANCE DX C357P | imageRUNNER ADVANCE DX C3822i | imageRUNNER ADVANCE C5550i | imageRUNNER ADVANCE C7570i |
| imageRUNNER ADVANCE C475i | imageRUNNER ADVANCE DX C3826i | imageRUNNER ADVANCE C5560i | imageRUNNER ADVANCE C7580i |
| imageRUNNER ADVANCE C475iZ | imageRUNNER ADVANCE DX C3830i | imageRUNNER ADVANCE C5560i ES | imageRUNNER ADVANCE DX C7765i |
| imageRUNNER ADVANCE DX C477i MFP | imageRUNNER ADVANCE DX C3835i | imageRUNNER ADVANCE C5560i ES+ | imageRUNNER ADVANCE DX C7770i |
| imageRUNNER ADVANCE DX C477iZ MFP | imageRUNNER ADVANCE DX C3922i | imageRUNNER ADVANCE DX C5735i | imageRUNNER ADVANCE DX C7780i |
| imageRUNNER ADVANCE DX C478i | imageRUNNER ADVANCE DX C3926i | imageRUNNER ADVANCE DX C5740i | |
| imageRUNNER ADVANCE DX C478iZ | imageRUNNER ADVANCE DX C3930i | imageRUNNER ADVANCE DX C5750i | |
| imageRUNNER ADVANCE C3520i | imageRUNNER ADVANCE DX C3935i | imageRUNNER ADVANCE DX C5760i | |

Серія imageRUNNER

| | | | |
|---------------------|---------------------|--------------------|--------------------|
| imageRUNNER C1538iF | imageRUNNER C1533iF | imageRUNNER C3226i | imageRUNNER C3326i |
|---------------------|---------------------|--------------------|--------------------|

Відмова від зобов'язань

* PRISMAсупс не підтримується

Canon

СУМІСНІ ПРИНТЕРИ

Серії i-SENSYS/i-SENSYS X

| | | | |
|-----------------------|-----------------------|-------------------------|-------------------|
| i-SENSYS LBP722Cdw | Серія i-SENSYS LBP670 | i-SENSYS MF832Cdw | i-SENSYS X C1533P |
| i-SENSYS LBP852Cx | Серія i-SENSYS MF740 | Серія i-SENSYS X C1127i | i-SENSYS X C1538P |
| Серія i-SENSYS LBP620 | Серія i-SENSYS MF750 | i-SENSYS X C1127P | i-SENSYS X C1946P |
| Серія i-SENSYS LBP630 | Серія i-SENSYS MF640 | Серія i-SENSYS X C1333i | |
| Серія i-SENSYS LBP660 | Серія i-SENSYS MF650 | i-SENSYS X C1333P | |