

YHTEENSOPIVAT TULOSTIMET

imagePROGRAF-sarja

imagePROGRAF TC-20	imagePROGRAF GP-6600S	imagePROGRAF iPF750 / MFP
imagePROGRAF TC-20M	imagePROGRAF PRO-300	imagePROGRAF iPF755 / MFP
imagePROGRAF TC-21	imagePROGRAF PRO-310	imagePROGRAF iPF760 / MFP
imagePROGRAF TC-21M	imagePROGRAF PRO-1000	imagePROGRAF iPF765 / MFP
imagePROGRAF TA-20	imagePROGRAF PRO-1100	imagePROGRAF iPF770 / MFP
imagePROGRAF TA-30	imagePROGRAF PRO-2000	imagePROGRAF iPF780 / MFP
imagePROGRAF TM-200 / MFP	imagePROGRAF PRO-2100	imagePROGRAF iPF785 / MFP
imagePROGRAF TM-205	imagePROGRAF PRO-2600	imagePROGRAF iPF8000/8000S
imagePROGRAF TM-300 / MFP	imagePROGRAF PRO-4000	imagePROGRAF iPF8100
imagePROGRAF TM-305 / MFP	imagePROGRAF PRO-4000S	imagePROGRAF iPF810
imagePROGRAF TM-240 / MFP	imagePROGRAF PRO-4100	imagePROGRAF iPF815 / MFP
imagePROGRAF TM-340 / MFP	imagePROGRAF PRO-4100S	imagePROGRAF iPF820
imagePROGRAF TM-255 / MFP	imagePROGRAF PRO-4600	imagePROGRAF iPF825 / MFP
imagePROGRAF TM-350 / MFP	imagePROGRAF PRO-6000	imagePROGRAF iPF830 / MFP
imagePROGRAF TM-355 / MFP	imagePROGRAF PRO-6000S	imagePROGRAF iPF8300/8300S
imagePROGRAF TX-2000	imagePROGRAF PRO-6100	imagePROGRAF iPF840 / MFP
imagePROGRAF TX-2100	imagePROGRAF PRO-6100S	imagePROGRAF iPF8400
imagePROGRAF TX-3000 / MFP	imagePROGRAF PRO-6600	imagePROGRAF iPF8400S/8400SE
imagePROGRAF TX-3100 / MFP	imagePROGRAF iPF500/510	imagePROGRAF iPF850 / MFP
imagePROGRAF TX-3200 / MFP	imagePROGRAF iPF5000/5100	imagePROGRAF iPF9000/9000S
imagePROGRAF TX-4000 / MFP	imagePROGRAF iPF600/605/610	imagePROGRAF iPF9100
imagePROGRAF TX-4100 / MFP	imagePROGRAF iPF6000S	imagePROGRAF iPF9400/9400S
imagePROGRAF TX-4200 / MFP	imagePROGRAF iPF6100/6200	
imagePROGRAF TZ-30000 / MFP	imagePROGRAF iPF6300/6300S	
imagePROGRAF TZ-32000 / MFP	imagePROGRAF iPF6350/6450	
imagePROGRAF GP-200	imagePROGRAF iPF6400	
imagePROGRAF GP-300	imagePROGRAF iPF6400S/6400SE	
imagePROGRAF GP-2000	imagePROGRAF iPF650/655	
imagePROGRAF GP-4000	imagePROGRAF iPF670 / MFP	
imagePROGRAF GP-2600S	imagePROGRAF iPF680/685	
imagePROGRAF GP-4600S	imagePROGRAF iPF700/710/720	

YHTEENSOPIVAT TULOSTIMET

PIXMA-sarja

PIXMA E204	PIXMA G3400	PIXMA G6045	PIXMA MG7751
PIXMA E304	PIXMA G3410	PIXMA G6050	PIXMA MG7752
PIXMA E3140	PIXMA G3415	PIXMA G6055	PIXMA MG7753
PIXMA E3340	PIXMA G3420	PIXMA G640	PIXMA PRO-200
PIXMA E3440	PIXMA G3430	PIXMA G650	PIXMA PRO-200S
PIXMA E414	PIXMA G3460	PIXMA G7040	PIXMA TR150
PIXMA E4240	PIXMA G3470	PIXMA G7045	Akkukäyttöinen PIXMA TR150
PIXMA E474	PIXMA G3480	PIXMA G7050	PIXMA TR4540
PIXMA G1400	PIXMA G3500	PIXMA G7055	PIXMA TR4550
PIXMA G1410	PIXMA G3501	PIXMA GM2040	PIXMA TR4551
PIXMA G1411	PIXMA G3510	PIXMA GM2050	PIXMA TR4640
PIXMA G1420	PIXMA G3520	PIXMA GM4040	PIXMA TR4650
PIXMA G1430	PIXMA G3560	PIXMA GM4050	PIXMA TR4750i
PIXMA G1500	PIXMA G3570	PIXMA MG3040	PIXMA TR4751i
PIXMA G1501	PIXMA G3571	PIXMA MG3050	PIXMA TR7540
PIXMA G1510	PIXMA G3572	PIXMA MG3051	PIXMA TR7550
PIXMA G1520	PIXMA G3590	PIXMA MG3052	PIXMA TR7640
PIXMA G1530	PIXMA G4400	PIXMA MG3053	PIXMA TR7650
PIXMA G2400	PIXMA G4410	PIXMA MG3640	PIXMA TR8540
PIXMA G2410	PIXMA G4411	PIXMA MG3650	PIXMA TR8550
PIXMA G2411	PIXMA G4470	PIXMA MG5740	PIXMA TS204
PIXMA G2415	PIXMA G4500	PIXMA MG5750	PIXMA TS205
PIXMA G2420	PIXMA G4510	PIXMA MG5751	PIXMA TS304
PIXMA G2430	PIXMA G4570	PIXMA MG5752	PIXMA TS305
PIXMA G2460	PIXMA G4511	PIXMA MG5753	PIXMA TS3140
PIXMA G2470	PIXMA G5040	PIXMA MG6840	PIXMA TS3150
PIXMA G2500	PIXMA G5045	PIXMA MG6850	PIXMA TS3151
PIXMA G2501	PIXMA G5050	PIXMA MG6851	PIXMA TS3340
PIXMA G2510	PIXMA G5055	PIXMA MG6852	PIXMA TS3350
PIXMA G2520	PIXMA G540	PIXMA MG6853	PIXMA TS3351
PIXMA G2560	PIXMA G550	PIXMA MG7740	PIXMA TS3352
PIXMA G2570	PIXMA G6040	PIXMA MG7750	



YHTEENSOPIVAT TULOSTIMET

PIXMA-sarja

PIXMA TS3355	PIXMA TS5352a	PIXMA TS705a	PIXMA TS8240a
PIXMA TS3440	PIXMA TS5353	PIXMA TS7440	PIXMA TS8250a
PIXMA TS3450	PIXMA TS5353a	PIXMA TS7440a	PIXMA TS8251
PIXMA TS3451	PIXMA TS5355	PIXMA TS7450	PIXMA TS8252
PIXMA TS3452	PIXMA TS5355a	PIXMA TS7450a	PIXMA TS8340
PIXMA TS3550i	PIXMA TS6040	PIXMA TS7450i	PIXMA TS8340a
PIXMA TS3551i	PIXMA TS6050	PIXMA TS7451	PIXMA TS8350
PIXMA TS5040	PIXMA TS6051	PIXMA TS7451a	PIXMA TS8350a
PIXMA TS5050	PIXMA TS6052	PIXMA TS7451i	PIXMA TS8351
PIXMA TS5051	PIXMA TS6140	PIXMA TS7640	PIXMA TS8351a
PIXMA TS5053	PIXMA TS6150	PIXMA TS7640i	PIXMA TS8352
PIXMA TS5055	PIXMA TS6151	PIXMA TS7650i	PIXMA TS8352a
PIXMA TS5140	PIXMA TS6240	PIXMA TS7740i	PIXMA TS8740
PIXMA TS5150	PIXMA TS6250	PIXMA TS7750i	PIXMA TS8750
PIXMA TS5151	PIXMA TS6251	PIXMA TS8040	PIXMA TS9040
PIXMA TS5340	PIXMA TS6340	PIXMA TS8050	PIXMA TS9050
PIXMA TS5340a	PIXMA TS6340a	PIXMA TS8051	PIXMA TS9055
PIXMA TS5350	PIXMA TS6350	PIXMA TS8052	PIXMA TS9140
PIXMA TS5350a	PIXMA TS6350a	PIXMA TS8053	PIXMA TS9150
PIXMA TS5350i	PIXMA TS6351	PIXMA TS8140	PIXMA TS9155
PIXMA TS5351i	PIXMA TS6351a	PIXMA TS8150	PIXMA TS9540
PIXMA TS5351	PIXMA TS704	PIXMA TS8151	PIXMA TS9541C
PIXMA TS5351a	PIXMA TS704a	PIXMA TS8152	PIXMA TS9550
PIXMA TS5352	PIXMA TS705	PIXMA TS8240	PIXMA TS9551C



YHTEENSOPIVAT TULOSTIMET

MAXIFY-sarja

Akkukäyttöinen MAXIFY BX110	MAXIFY GX5050	MAXIFY GX7040	MAXIFY MB5140
MAXIFY GX1040	MAXIFY GX5140	MAXIFY GX7050	MAXIFY MB5150
MAXIFY GX1050	MAXIFY GX5150	MAXIFY GX7140	MAXIFY MB5155
MAXIFY GX2040	MAXIFY GX5540	MAXIFY GX7150	MAXIFY MB5440
MAXIFY GX2050	MAXIFY GX5550	MAXIFY MB2140	MAXIFY MB5450
MAXIFY GX3040	MAXIFY GX6040	MAXIFY MB2150	MAXIFY MB5455
MAXIFY GX3050	MAXIFY GX6050	MAXIFY MB2155	MAXIFY iB4140
MAXIFY GX4040	MAXIFY GX6140	MAXIFY MB2740	MAXIFY iB4150
MAXIFY GX4050	MAXIFY GX6150	MAXIFY MB2750	MAXIFY GX5040
MAXIFY GX5040	MAXIFY GX6550	MAXIFY MB2755	MAXIFY GX5050

imagePRESS-sarja

imagePRESS C10000VP*	imagePRESS C265	imagePRESS C810*	imagePRESS V800*
imagePRESS C10010VP*	imagePRESS C270	imagePRESS C9010V*	imagePRESS V900*
imagePRESS C165	imagePRESS C710*	imagePRESS C910*	imagePRESS V1000*
imagePRESS C170	imagePRESS C8000VP*	imagePRESS V700*	imagePRESS V1350*

imageFORCE

imageFORCE C5140	imageFORCE C5160	imageFORCE C5170	imageFORCE C7165
imageFORCE C5150			

Vastuuvapauslauseke
*PRISMAsync-palvelua ei tueta



YHTEENSOPIVAT TULOSTIMET

imageRUNNER ADVANCE -sarja

imageRUNNER ADVANCE C256i	imageRUNNER ADVANCE C3525i	imageRUNNER ADVANCE DX C3935i	imageRUNNER ADVANCE DX C5740i
imageRUNNER ADVANCE C356i	imageRUNNER ADVANCE C3530i	imageRUNNER ADVANCE DX C259i	imageRUNNER ADVANCE DX C5750i
imageRUNNER ADVANCE C356P	imageRUNNER ADVANCE 3530i ES	imageRUNNER ADVANCE DX C359i	imageRUNNER ADVANCE DX C5760i
imageRUNNER ADVANCE DX C257i	imageRUNNER ADVANCE DX C3720i	imageRUNNER ADVANCE DX C359P	imageRUNNER ADVANCE DX C5840i
imageRUNNER ADVANCE DX C357i	imageRUNNER ADVANCE DX C3725i	imageRUNNER ADVANCE C5535i	imageRUNNER ADVANCE DX C5850i
imageRUNNER ADVANCE DX C357P	imageRUNNER ADVANCE DX C3730i	imageRUNNER ADVANCE C5540i	imageRUNNER ADVANCE DX C5860i
imageRUNNER ADVANCE C475i	imageRUNNER ADVANCE DX C3822i	imageRUNNER ADVANCE C5540i ES+ II	imageRUNNER ADVANCE DX C5870i
imageRUNNER ADVANCE C475iZ	imageRUNNER ADVANCE DX C3826i	imageRUNNER ADVANCE C5550i	imageRUNNER ADVANCE C7565i
imageRUNNER ADVANCE DX C477i MFP	imageRUNNER ADVANCE DX C3830i	imageRUNNER ADVANCE C5560i	imageRUNNER ADVANCE C7570i
imageRUNNER ADVANCE DX C477iZ MFP	imageRUNNER ADVANCE DX C3835i	imageRUNNER ADVANCE C5560i ES	imageRUNNER ADVANCE C7580i
imageRUNNER ADVANCE DX C478i	imageRUNNER ADVANCE DX C3922i	imageRUNNER ADVANCE C5560i ES+	imageRUNNER ADVANCE DX C7765i
imageRUNNER ADVANCE DX C478iZ	imageRUNNER ADVANCE DX C3926i	imageRUNNER ADVANCE C5560i ES+ II	imageRUNNER ADVANCE DX C7770i
imageRUNNER ADVANCE C3520i	imageRUNNER ADVANCE DX C3930i	imageRUNNER ADVANCE DX C5735i	imageRUNNER ADVANCE DX C7780i

imageRUNNER-sarja

imageRUNNER C1538iF	imageRUNNER C1533iF	imageRUNNER C3226i	imageRUNNER C3326i
---------------------	---------------------	--------------------	--------------------

i-SENSYS-/i-SENSYS X -sarja

i-SENSYS LBP722Cdw	i-SENSYS MF740 -sarja	i-SENSYS X C1127P	i-SENSYS X C1538iF II
i-SENSYS LBP732Cdw	i-SENSYS MF750 -sarja	i-SENSYS X C1333i -sarja	i-SENSYS X C1538P II
i-SENSYS LBP852Cx	i-SENSYS MF640 -sarja	i-SENSYS X C1333P	i-SENSYS X C1936P
i-SENSYS LBP620 -sarja	i-SENSYS MF650 -sarja	i-SENSYS X C1533iF II	i-SENSYS X C1946P
i-SENSYS LBP630 -sarja	i-SENSYS MF832Cdw	i-SENSYS X C1533P	
i-SENSYS LBP660 -sarja	i-SENSYS MF842Cdw	i-SENSYS X C1533P II	
i-SENSYS LBP670 -sarja	i-SENSYS X C1127i -sarja	i-SENSYS X C1538P	

