

SUDERINAMI SPAUSDINTUVAI

„imagePROGRAF“ serija

„imagePROGRAF TC-20“	„imagePROGRAF GP-6600S“	„imagePROGRAF iPF750 / MFP“
„imagePROGRAF TC-20M“	„imagePROGRAF PRO-300“	„imagePROGRAF iPF755 / MFP“
„imagePROGRAF TC-21“	„imagePROGRAF PRO-310“	„imagePROGRAF iPF760 / MFP“
„imagePROGRAF TC-21M“	„imagePROGRAF PRO-1000“	„imagePROGRAF iPF765 / MFP“
„imagePROGRAF TA-20“	„imagePROGRAF PRO-1100“	„imagePROGRAF iPF770 / MFP“
„imagePROGRAF TA-30“	„imagePROGRAF PRO-2000“	„imagePROGRAF iPF780 / MFP“
„imagePROGRAF TM-200 / MFP“	„imagePROGRAF PRO-2100“	„imagePROGRAF iPF785 / MFP“
„imagePROGRAF TM-205“	„imagePROGRAF PRO-2600“	„imagePROGRAF iPF8000 / 8000S“
„imagePROGRAF TM-300 / MFP“	„imagePROGRAF PRO-4000“	„imagePROGRAF iPF8100“
„imagePROGRAF TM-305 / MFP“	„imagePROGRAF PRO-4000S“	„imagePROGRAF iPF810“
„imagePROGRAF TM-240 / MFP“	„imagePROGRAF PRO-4100“	„imagePROGRAF iPF815 / MFP“
„imagePROGRAF TM-340 / MFP“	„imagePROGRAF PRO-4100S“	„imagePROGRAF iPF820“
„imagePROGRAF TM-255 / MFP“	„imagePROGRAF PRO-4600“	„imagePROGRAF iPF825 / MFP“
„imagePROGRAF TM-350 / MFP“	„imagePROGRAF PRO-6000“	„imagePROGRAF iPF830 / MFP“
„imagePROGRAF TM-355 / MFP“	„imagePROGRAF PRO-6000S“	„imagePROGRAF iPF8300 / 8300S“
„imagePROGRAF TX-2000“	„imagePROGRAF PRO-6100“	„imagePROGRAF iPF840 / MFP“
„imagePROGRAF TX-2100“	„imagePROGRAF PRO-6100S“	„imagePROGRAF iPF8400“
„imagePROGRAF TX-3000 / MFP“	„imagePROGRAF PRO-6600“	„imagePROGRAF iPF8400S / 8400SE“
„imagePROGRAF TX-3100 / MFP“	„imagePROGRAF iPF500 / 510“	„imagePROGRAF iPF850 / MFP“
„imagePROGRAF TX-3200 / MFP“	„imagePROGRAF iPF5000 / 5100“	„imagePROGRAF iPF9000 / 9000S“
„imagePROGRAF TX-4000 / MFP“	„imagePROGRAF iPF600 / 605 / 610“	„imagePROGRAF iPF9100“
„imagePROGRAF TX-4100 / MFP“	„imagePROGRAF iPF6000S“	„imagePROGRAF iPF9400 / 9400S“
„imagePROGRAF TX-4200 / MFP“	„imagePROGRAF iPF6100 / 6200“	
„imagePROGRAF TZ-30000 / MFP“	„imagePROGRAF iPF6300 / 6300S“	
„imagePROGRAF TZ-32000 / MFP“	„imagePROGRAF iPF6350 / 6450“	
„imagePROGRAF GP-200“	„imagePROGRAF iPF6400“	
„imagePROGRAF GP-300“	„imagePROGRAF iPF6400S / 6400SE“	
„imagePROGRAF GP-2000“	„imagePROGRAF iPF650 / 655“	
„imagePROGRAF GP-4000“	„imagePROGRAF iPF670 / MFP“	
„imagePROGRAF GP-2600S“	„imagePROGRAF iPF680 / 685“	
„imagePROGRAF GP-4600S“	„imagePROGRAF iPF700 / 710 / 720“	

SUDERINAMI SPAUSDINTUVAI

PIXMA serija

PIXMA E204	PIXMA G3400	PIXMA G6045	PIXMA MG7751
PIXMA E304	PIXMA G3410	PIXMA G6050	PIXMA MG7752
PIXMA E3140	PIXMA G3415	PIXMA G6055	PIXMA MG7753
PIXMA E3340	PIXMA G3420	PIXMA G640	PIXMA PRO-200
PIXMA E3440	PIXMA G3430	PIXMA G650	PIXMA PRO-200S
PIXMA E414	PIXMA G3460	PIXMA G7040	PIXMA TR150
PIXMA E4240	PIXMA G3470	PIXMA G7045	PIXMA TR150 su baterija
PIXMA E474	PIXMA G3480	PIXMA G7050	PIXMA TR4540
PIXMA G1400	PIXMA G3500	PIXMA G7055	PIXMA TR4550
PIXMA G1410	PIXMA G3501	PIXMA GM2040	PIXMA TR4551
PIXMA G1411	PIXMA G3510	PIXMA GM2050	PIXMA TR4640
PIXMA G1420	PIXMA G3520	PIXMA GM4040	PIXMA TR4650
PIXMA G1430	PIXMA G3560	PIXMA GM4050	PIXMA TR4750i
PIXMA G1500	PIXMA G3570	PIXMA MG3040	PIXMA TR4751i
PIXMA G1501	PIXMA G3571	PIXMA MG3050	PIXMA TR7540
PIXMA G1510	PIXMA G3572	PIXMA MG3051	PIXMA TR7550
PIXMA G1520	PIXMA G3590	PIXMA MG3052	PIXMA TR7640
PIXMA G1530	PIXMA G4400	PIXMA MG3053	PIXMA TR7650
PIXMA G2400	PIXMA G4410	PIXMA MG3640	PIXMA TR8540
PIXMA G2410	PIXMA G4411	PIXMA MG3650	PIXMA TR8550
PIXMA G2411	PIXMA G4470	PIXMA MG5740	PIXMA TS204
PIXMA G2415	PIXMA G4500	PIXMA MG5750	PIXMA TS205
PIXMA G2420	PIXMA G4510	PIXMA MG5751	PIXMA TS304
PIXMA G2430	PIXMA G4570	PIXMA MG5752	PIXMA TS305
PIXMA G2460	PIXMA G4511	PIXMA MG5753	PIXMA TS3140
PIXMA G2470	PIXMA G5040	PIXMA MG6840	PIXMA TS3150
PIXMA G2500	PIXMA G5045	PIXMA MG6850	PIXMA TS3151
PIXMA G2501	PIXMA G5050	PIXMA MG6851	PIXMA TS3340
PIXMA G2510	PIXMA G5055	PIXMA MG6852	PIXMA TS3350
PIXMA G2520	PIXMA G540	PIXMA MG6853	PIXMA TS3351
PIXMA G2560	PIXMA G550	PIXMA MG7740	PIXMA TS3352
PIXMA G2570	PIXMA G6040	PIXMA MG7750	



SUDERINAMI SPAUSDINTUVAI

PIXMA serija

PIXMA TS3355	PIXMA TS5352a	PIXMA TS705a	PIXMA TS8240a
PIXMA TS3440	PIXMA TS5353	PIXMA TS7440	PIXMA TS8250a
PIXMA TS3450	PIXMA TS5353a	PIXMA TS7440a	PIXMA TS8251
PIXMA TS3451	PIXMA TS5355	PIXMA TS7450	PIXMA TS8252
PIXMA TS3452	PIXMA TS5355a	PIXMA TS7450a	PIXMA TS8340
PIXMA TS3550i	PIXMA TS6040	PIXMA TS7450i	PIXMA TS8340a
PIXMA TS3551i	PIXMA TS6050	PIXMA TS7451	PIXMA TS8350
PIXMA TS5040	PIXMA TS6051	PIXMA TS7451a	PIXMA TS8350a
PIXMA TS5050	PIXMA TS6052	PIXMA TS7451i	PIXMA TS8351
PIXMA TS5051	PIXMA TS6140	PIXMA TS7640	PIXMA TS8351a
PIXMA TS5053	PIXMA TS6150	PIXMA TS7640i	PIXMA TS8352
PIXMA TS5055	PIXMA TS6151	PIXMA TS7650i	PIXMA TS8352a
PIXMA TS5140	PIXMA TS6240	PIXMA TS7740i	PIXMA TS8740
PIXMA TS5150	PIXMA TS6250	PIXMA TS7750i	PIXMA TS8750
PIXMA TS5151	PIXMA TS6251	PIXMA TS8040	PIXMA TS9040
PIXMA TS5340	PIXMA TS6340	PIXMA TS8050	PIXMA TS9050
PIXMA TS5340a	PIXMA TS6340a	PIXMA TS8051	PIXMA TS9055
PIXMA TS5350	PIXMA TS6350	PIXMA TS8052	PIXMA TS9140
PIXMA TS5350a	PIXMA TS6350a	PIXMA TS8053	PIXMA TS9150
PIXMA TS5350i	PIXMA TS6351	PIXMA TS8140	PIXMA TS9155
PIXMA TS5351i	PIXMA TS6351a	PIXMA TS8150	PIXMA TS9540
PIXMA TS5351	PIXMA TS704	PIXMA TS8151	PIXMA TS9541C
PIXMA TS5351a	PIXMA TS704a	PIXMA TS8152	PIXMA TS9550
PIXMA TS5352	PIXMA TS705	PIXMA TS8240	PIXMA TS9551C



SUDERINAMI SPAUSDINTUVAI

MAXIFY serija

MAXIFY BX110 su baterija	MAXIFY GX5050	MAXIFY GX7040	MAXIFY MB5140
MAXIFY GX1040	MAXIFY GX5140	MAXIFY GX7050	MAXIFY MB5150
MAXIFY GX1050	MAXIFY GX5150	MAXIFY GX7140	MAXIFY MB5155
MAXIFY GX2040	MAXIFY GX5540	MAXIFY GX7150	MAXIFY MB5440
MAXIFY GX2050	MAXIFY GX5550	MAXIFY MB2140	MAXIFY MB5450
MAXIFY GX3040	MAXIFY GX6040	MAXIFY MB2150	MAXIFY MB5455
MAXIFY GX3050	MAXIFY GX6050	MAXIFY MB2155	MAXIFY iB4140
MAXIFY GX4040	MAXIFY GX6140	MAXIFY MB2740	MAXIFY iB4150
MAXIFY GX4050	MAXIFY GX6150	MAXIFY MB2750	MAXIFY GX5040
MAXIFY GX5040	MAXIFY GX6550	MAXIFY MB2755	MAXIFY GX5050

„imagePRESS“ serija

„imagePRESS C10000VP“*	„imagePRESS C265“	„imagePRESS C810“*	„imagePRESS V800“*
„imagePRESS C10010VP“*	„imagePRESS C270“	„imagePRESS C9010V“*	„imagePRESS V900“*
„imagePRESS C165“	„imagePRESS C710“*	„imagePRESS C910“*	„imagePRESS V1000“*
„imagePRESS C170“	„imagePRESS C8000VP“*	„imagePRESS V700“*	„imagePRESS V1350“*

„imageFORCE“

„imageFORCE C5140“	„imageFORCE C5160“	„imageFORCE C5170“	„imageFORCE C7165“
„imageFORCE C5150“			

Atsakomybės ribojimas
* „PRISMAsync“ nepalaikomas



SUDERINAMI SPAUSDINTUVAI

„imageRUNNER ADVANCE“ serija

„imageRUNNER ADVANCE C256i“	„imageRUNNER ADVANCE C3525i“	„imageRUNNER ADVANCE DX C3935i“	„imageRUNNER ADVANCE DX C5740i“
„imageRUNNER ADVANCE C356i“	„imageRUNNER ADVANCE C3530i“	„imageRUNNER ADVANCE DX C259i“	„imageRUNNER ADVANCE DX C5750i“
„imageRUNNER ADVANCE C356P“	„imageRUNNER ADVANCE 3530i ES“	„imageRUNNER ADVANCE DX C359i“	„imageRUNNER ADVANCE DX C5760i“
„imageRUNNER ADVANCE DX C257i“	„imageRUNNER ADVANCE DX C3720i“	„imageRUNNER ADVANCE DX C359P“	„imageRUNNER ADVANCE DX C5840i“
„imageRUNNER ADVANCE DX C357i“	„imageRUNNER ADVANCE DX C3725i“	„imageRUNNER ADVANCE C5535i“	„imageRUNNER ADVANCE DX C5850i“
„imageRUNNER ADVANCE DX C357P“	„imageRUNNER ADVANCE DX C3730i“	„imageRUNNER ADVANCE C5540i“	„imageRUNNER ADVANCE DX C5860i“
„imageRUNNER ADVANCE C475i“	„imageRUNNER ADVANCE DX C3822i“	„imageRUNNER ADVANCE C5540i ES+ II“	„imageRUNNER ADVANCE DX C5870i“
„imageRUNNER ADVANCE C475iZ“	„imageRUNNER ADVANCE DX C3826i“	„imageRUNNER ADVANCE C5550i“	„imageRUNNER ADVANCE C7565i“
„imageRUNNER ADVANCE DX C477i MFP“	„imageRUNNER ADVANCE DX C3830i“	„imageRUNNER ADVANCE C5560i“	„imageRUNNER ADVANCE C7570i“
„imageRUNNER ADVANCE DX C477iZ MFP“	„imageRUNNER ADVANCE DX C3835i“	„imageRUNNER ADVANCE C5560i ES“	„imageRUNNER ADVANCE C7580i“
„imageRUNNER ADVANCE DX C478i“	„imageRUNNER ADVANCE DX C3922i“	„imageRUNNER ADVANCE C5560i ES+“	„imageRUNNER ADVANCE DX C7765i“
„imageRUNNER ADVANCE DX C478iZ“	„imageRUNNER ADVANCE DX C3926i“	„imageRUNNER ADVANCE C5560i ES+ II“	„imageRUNNER ADVANCE DX C7770i“
„imageRUNNER ADVANCE C3520i“	„imageRUNNER ADVANCE DX C3930i“	„imageRUNNER ADVANCE DX C5735i“	„imageRUNNER ADVANCE DX C7780i“

„imageRUNNER“ serija

„imageRUNNER C1538iF“	„imageRUNNER C1533iF“	„imageRUNNER C3226i“	„imageRUNNER C3326i“
-----------------------	-----------------------	----------------------	----------------------

„i-SENSYS“ / „i-SENSYS X“ serija

„i-SENSYS LBP722Cdw“	„i-SENSYS MF740“ serija	„i-SENSYS X C1127P“	„i-SENSYS X C1538iF II“
„i-SENSYS LBP732Cdw“	„i-SENSYS MF750“ serija	„i-SENSYS X C1333i“ serija	„i-SENSYS X C1538P II“
„i-SENSYS LBP852Cx“	„i-SENSYS MF640“ serija	„i-SENSYS X C1333P“	„i-SENSYS X C1936P“
„i-SENSYS LBP620“ serija	„i-SENSYS MF650“ serija	„i-SENSYS X C1533iF II“	„i-SENSYS X C1946P“
„i-SENSYS LBP630“ serija	„i-SENSYS MF832Cdw“	„i-SENSYS X C1533P“	
„i-SENSYS LBP660“ serija	„i-SENSYS MF842Cdw“	„i-SENSYS X C1533P II“	
„i-SENSYS LBP670“ serija	„i-SENSYS X C1127i“ serija	„i-SENSYS X C1538P“	

