

# COMPATIBELE PRINTERS

## imagePROGRAF-serie

|                             |                              |                              |
|-----------------------------|------------------------------|------------------------------|
| imagePROGRAF TC-20          | imagePROGRAF GP-6600S        | imagePROGRAF iPF750 / MFP    |
| imagePROGRAF TC-20M         | imagePROGRAF PRO-300         | imagePROGRAF iPF755 / MFP    |
| imagePROGRAF TC-21          | imagePROGRAF PRO-310         | imagePROGRAF iPF760 / MFP    |
| imagePROGRAF TC-21M         | imagePROGRAF PRO-1000        | imagePROGRAF iPF765 / MFP    |
| imagePROGRAF TA-20          | imagePROGRAF PRO-1100        | imagePROGRAF iPF770 / MFP    |
| imagePROGRAF TA-30          | imagePROGRAF PRO-2000        | imagePROGRAF iPF780 / MFP    |
| imagePROGRAF TM-200 / MFP   | imagePROGRAF PRO-2100        | imagePROGRAF iPF785 / MFP    |
| imagePROGRAF TM-205         | imagePROGRAF PRO-2600        | imagePROGRAF iPF8000/8000S   |
| imagePROGRAF TM-300 / MFP   | imagePROGRAF PRO-4000        | imagePROGRAF iPF8100         |
| imagePROGRAF TM-305 / MFP   | imagePROGRAF PRO-4000S       | imagePROGRAF iPF810          |
| imagePROGRAF TM-240 / MFP   | imagePROGRAF PRO-4100        | imagePROGRAF iPF815 / MFP    |
| imagePROGRAF TM-340 / MFP   | imagePROGRAF PRO-4100S       | imagePROGRAF iPF820          |
| imagePROGRAF TM-255 / MFP   | imagePROGRAF PRO-4600        | imagePROGRAF iPF825 / MFP    |
| imagePROGRAF TM-350 / MFP   | imagePROGRAF PRO-6000        | imagePROGRAF iPF830 / MFP    |
| imagePROGRAF TM-355 / MFP   | imagePROGRAF PRO-6000S       | imagePROGRAF iPF8300/8300S   |
| imagePROGRAF TX-2000        | imagePROGRAF PRO-6100        | imagePROGRAF iPF840 / MFP    |
| imagePROGRAF TX-2100        | imagePROGRAF PRO-6100S       | imagePROGRAF iPF8400         |
| imagePROGRAF TX-3000 / MFP  | imagePROGRAF PRO-6600        | imagePROGRAF iPF8400S/8400SE |
| imagePROGRAF TX-3100 / MFP  | imagePROGRAF iPF500/510      | imagePROGRAF iPF850 / MFP    |
| imagePROGRAF TX-3200 / MFP  | imagePROGRAF iPF5000/5100    | imagePROGRAF iPF9000/9000S   |
| imagePROGRAF TX-4000 / MFP  | imagePROGRAF iPF600/605/610  | imagePROGRAF iPF9100         |
| imagePROGRAF TX-4100 / MFP  | imagePROGRAF iPF6000S        | imagePROGRAF iPF9400/9400S   |
| imagePROGRAF TX-4200 / MFP  | imagePROGRAF iPF6100/6200    |                              |
| imagePROGRAF TZ-30000 / MFP | imagePROGRAF iPF6300/6300S   |                              |
| imagePROGRAF TZ-32000 / MFP | imagePROGRAF iPF6350/6450    |                              |
| imagePROGRAF GP-200         | imagePROGRAF iPF6400         |                              |
| imagePROGRAF GP-300         | imagePROGRAF iPF6400S/6400SE |                              |
| imagePROGRAF GP-2000        | imagePROGRAF iPF650/655      |                              |
| imagePROGRAF GP-4000        | imagePROGRAF iPF670 / MFP    |                              |
| imagePROGRAF GP-2600S       | imagePROGRAF iPF680/685      |                              |
| imagePROGRAF GP-4600S       | imagePROGRAF iPF700/710/720  |                              |

# COMPATIBELE PRINTERS

## PIXMA-serie

|             |             |              |                      |
|-------------|-------------|--------------|----------------------|
| PIXMA E204  | PIXMA G3400 | PIXMA G6045  | PIXMA MG7751         |
| PIXMA E304  | PIXMA G3410 | PIXMA G6050  | PIXMA MG7752         |
| PIXMA E3140 | PIXMA G3415 | PIXMA G6055  | PIXMA MG7753         |
| PIXMA E3340 | PIXMA G3420 | PIXMA G640   | PIXMA PRO-200        |
| PIXMA E3440 | PIXMA G3430 | PIXMA G650   | PIXMA PRO-200S       |
| PIXMA E414  | PIXMA G3460 | PIXMA G7040  | PIXMA TR150          |
| PIXMA E4240 | PIXMA G3470 | PIXMA G7045  | PIXMA TR150 met accu |
| PIXMA E474  | PIXMA G3480 | PIXMA G7050  | PIXMA TR4540         |
| PIXMA G1400 | PIXMA G3500 | PIXMA G7055  | PIXMA TR4550         |
| PIXMA G1410 | PIXMA G3501 | PIXMA GM2040 | PIXMA TR4551         |
| PIXMA G1411 | PIXMA G3510 | PIXMA GM2050 | PIXMA TR4640         |
| PIXMA G1420 | PIXMA G3520 | PIXMA GM4040 | PIXMA TR4650         |
| PIXMA G1430 | PIXMA G3560 | PIXMA GM4050 | PIXMA TR4750i        |
| PIXMA G1500 | PIXMA G3570 | PIXMA MG3040 | PIXMA TR4751i        |
| PIXMA G1501 | PIXMA G3571 | PIXMA MG3050 | PIXMA TR7540         |
| PIXMA G1510 | PIXMA G3572 | PIXMA MG3051 | PIXMA TR7550         |
| PIXMA G1520 | PIXMA G3590 | PIXMA MG3052 | PIXMA TR7640         |
| PIXMA G1530 | PIXMA G4400 | PIXMA MG3053 | PIXMA TR7650         |
| PIXMA G2400 | PIXMA G4410 | PIXMA MG3640 | PIXMA TR8540         |
| PIXMA G2410 | PIXMA G4411 | PIXMA MG3650 | PIXMA TR8550         |
| PIXMA G2411 | PIXMA G4470 | PIXMA MG5740 | PIXMA TS204          |
| PIXMA G2415 | PIXMA G4500 | PIXMA MG5750 | PIXMA TS205          |
| PIXMA G2420 | PIXMA G4510 | PIXMA MG5751 | PIXMA TS304          |
| PIXMA G2430 | PIXMA G4570 | PIXMA MG5752 | PIXMA TS305          |
| PIXMA G2460 | PIXMA G4511 | PIXMA MG5753 | PIXMA TS3140         |
| PIXMA G2470 | PIXMA G5040 | PIXMA MG6840 | PIXMA TS3150         |
| PIXMA G2500 | PIXMA G5045 | PIXMA MG6850 | PIXMA TS3151         |
| PIXMA G2501 | PIXMA G5050 | PIXMA MG6851 | PIXMA TS3340         |
| PIXMA G2510 | PIXMA G5055 | PIXMA MG6852 | PIXMA TS3350         |
| PIXMA G2520 | PIXMA G540  | PIXMA MG6853 | PIXMA TS3351         |
| PIXMA G2560 | PIXMA G550  | PIXMA MG7740 | PIXMA TS3352         |
| PIXMA G2570 | PIXMA G6040 | PIXMA MG7750 |                      |

**Canon**

# COMPATIBELE PRINTERS

## PIXMA-serie

|               |               |               |               |
|---------------|---------------|---------------|---------------|
| PIXMA TS3355  | PIXMA TS5352a | PIXMA TS705a  | PIXMA TS8240a |
| PIXMA TS3440  | PIXMA TS5353  | PIXMA TS7440  | PIXMA TS8250a |
| PIXMA TS3450  | PIXMA TS5353a | PIXMA TS7440a | PIXMA TS8251  |
| PIXMA TS3451  | PIXMA TS5355  | PIXMA TS7450  | PIXMA TS8252  |
| PIXMA TS3452  | PIXMA TS5355a | PIXMA TS7450a | PIXMA TS8340  |
| PIXMA TS3550i | PIXMA TS6040  | PIXMA TS7450i | PIXMA TS8340a |
| PIXMA TS3551i | PIXMA TS6050  | PIXMA TS7451  | PIXMA TS8350  |
| PIXMA TS5040  | PIXMA TS6051  | PIXMA TS7451a | PIXMA TS8350a |
| PIXMA TS5050  | PIXMA TS6052  | PIXMA TS7451i | PIXMA TS8351  |
| PIXMA TS5051  | PIXMA TS6140  | PIXMA TS7640  | PIXMA TS8351a |
| PIXMA TS5053  | PIXMA TS6150  | PIXMA TS7640i | PIXMA TS8352  |
| PIXMA TS5055  | PIXMA TS6151  | PIXMA TS7650i | PIXMA TS8352a |
| PIXMA TS5140  | PIXMA TS6240  | PIXMA TS7740i | PIXMA TS8740  |
| PIXMA TS5150  | PIXMA TS6250  | PIXMA TS7750i | PIXMA TS8750  |
| PIXMA TS5151  | PIXMA TS6251  | PIXMA TS8040  | PIXMA TS9040  |
| PIXMA TS5340  | PIXMA TS6340  | PIXMA TS8050  | PIXMA TS9050  |
| PIXMA TS5340a | PIXMA TS6340a | PIXMA TS8051  | PIXMA TS9055  |
| PIXMA TS5350  | PIXMA TS6350  | PIXMA TS8052  | PIXMA TS9140  |
| PIXMA TS5350a | PIXMA TS6350a | PIXMA TS8053  | PIXMA TS9150  |
| PIXMA TS5350i | PIXMA TS6351  | PIXMA TS8140  | PIXMA TS9155  |
| PIXMA TS5351i | PIXMA TS6351a | PIXMA TS8150  | PIXMA TS9540  |
| PIXMA TS5351  | PIXMA TS704   | PIXMA TS8151  | PIXMA TS9541C |
| PIXMA TS5351a | PIXMA TS704a  | PIXMA TS8152  | PIXMA TS9550  |
| PIXMA TS5352  | PIXMA TS705   | PIXMA TS8240  | PIXMA TS9551C |

# COMPATIBELE PRINTERS

## MAXIFY-serie

|                       |               |               |               |
|-----------------------|---------------|---------------|---------------|
| MAXIFY BX110 met accu | MAXIFY GX5050 | MAXIFY GX7040 | MAXIFY MB5140 |
| MAXIFY GX1040         | MAXIFY GX5140 | MAXIFY GX7050 | MAXIFY MB5150 |
| MAXIFY GX1050         | MAXIFY GX5150 | MAXIFY GX7140 | MAXIFY MB5155 |
| MAXIFY GX2040         | MAXIFY GX5540 | MAXIFY GX7150 | MAXIFY MB5440 |
| MAXIFY GX2050         | MAXIFY GX5550 | MAXIFY MB2140 | MAXIFY MB5450 |
| MAXIFY GX3040         | MAXIFY GX6040 | MAXIFY MB2150 | MAXIFY MB5455 |
| MAXIFY GX3050         | MAXIFY GX6050 | MAXIFY MB2155 | MAXIFY iB4140 |
| MAXIFY GX4040         | MAXIFY GX6140 | MAXIFY MB2740 | MAXIFY iB4150 |
| MAXIFY GX4050         | MAXIFY GX6150 | MAXIFY MB2750 | MAXIFY GX5040 |
| MAXIFY GX5040         | MAXIFY GX6550 | MAXIFY MB2755 | MAXIFY GX5050 |

## imagePRESS-serie

|                      |                     |                    |                   |
|----------------------|---------------------|--------------------|-------------------|
| imagePRESS C10000VP* | imagePRESS C265     | imagePRESS C810*   | imagePRESS V800*  |
| imagePRESS C10010VP* | imagePRESS C270     | imagePRESS C9010V* | imagePRESS V900*  |
| imagePRESS C165      | imagePRESS C710*    | imagePRESS C910*   | imagePRESS V1000* |
| imagePRESS C170      | imagePRESS C8000VP* | imagePRESS V700*   | imagePRESS V1350* |

## imageFORCE

|                  |                  |                  |                  |
|------------------|------------------|------------------|------------------|
| imageFORCE C5140 | imageFORCE C5160 | imageFORCE C5170 | imageFORCE C7165 |
| imageFORCE C5150 |                  |                  |                  |

### Disclaimer

\*PRISMAsync wordt niet ondersteund



# COMPATIBELE PRINTERS

## imageRUNNER ADVANCE-serie

|                                   |                               |                                   |                               |
|-----------------------------------|-------------------------------|-----------------------------------|-------------------------------|
| imageRUNNER ADVANCE C256i         | imageRUNNER ADVANCE C3525i    | imageRUNNER ADVANCE DX C3935i     | imageRUNNER ADVANCE DX C5740i |
| imageRUNNER ADVANCE C356i         | imageRUNNER ADVANCE C3530i    | imageRUNNER ADVANCE DX C259i      | imageRUNNER ADVANCE DX C5750i |
| imageRUNNER ADVANCE C356P         | imageRUNNER ADVANCE 3530i ES  | imageRUNNER ADVANCE DX C359i      | imageRUNNER ADVANCE DX C5760i |
| imageRUNNER ADVANCE DX C257i      | imageRUNNER ADVANCE DX C3720i | imageRUNNER ADVANCE DX C359P      | imageRUNNER ADVANCE DX C5840i |
| imageRUNNER ADVANCE DX C357i      | imageRUNNER ADVANCE DX C3725i | imageRUNNER ADVANCE C5535i        | imageRUNNER ADVANCE DX C5850i |
| imageRUNNER ADVANCE DX C357P      | imageRUNNER ADVANCE DX C3730i | imageRUNNER ADVANCE C5540i        | imageRUNNER ADVANCE DX C5860i |
| imageRUNNER ADVANCE C475i         | imageRUNNER ADVANCE DX C3822i | imageRUNNER ADVANCE C5540i ES+ II | imageRUNNER ADVANCE DX C5870i |
| imageRUNNER ADVANCE C475iZ        | imageRUNNER ADVANCE DX C3826i | imageRUNNER ADVANCE C5550i        | imageRUNNER ADVANCE C7565i    |
| imageRUNNER ADVANCE DX C477i MFP  | imageRUNNER ADVANCE DX C3830i | imageRUNNER ADVANCE C5560i        | imageRUNNER ADVANCE C7570i    |
| imageRUNNER ADVANCE DX C477iZ MFP | imageRUNNER ADVANCE DX C3835i | imageRUNNER ADVANCE C5560i ES     | imageRUNNER ADVANCE C7580i    |
| imageRUNNER ADVANCE DX C478i      | imageRUNNER ADVANCE DX C3922i | imageRUNNER ADVANCE C5560i ES+    | imageRUNNER ADVANCE DX C7765i |
| imageRUNNER ADVANCE DX C478iZ     | imageRUNNER ADVANCE DX C3926i | imageRUNNER ADVANCE C5560i ES+ II | imageRUNNER ADVANCE DX C7770i |
| imageRUNNER ADVANCE C3520i        | imageRUNNER ADVANCE DX C3930i | imageRUNNER ADVANCE DX C5735i     | imageRUNNER ADVANCE DX C7780i |

## imageRUNNER-serie

|                     |                     |                    |                    |
|---------------------|---------------------|--------------------|--------------------|
| imageRUNNER C1538iF | imageRUNNER C1533iF | imageRUNNER C3226i | imageRUNNER C3326i |
|---------------------|---------------------|--------------------|--------------------|

## i-SENSYS / i-SENSYS X-serie

|                       |                         |                         |                       |
|-----------------------|-------------------------|-------------------------|-----------------------|
| i-SENSYS LBP722Cdw    | i-SENSYS MF740-serie    | i-SENSYS X C1127P       | i-SENSYS X C1538iF II |
| i-SENSYS LBP732Cdw    | i-SENSYS MF750-serie    | i-SENSYS X C1333i-serie | i-SENSYS X C1538P II  |
| i-SENSYS LBP852Cx     | i-SENSYS MF640-serie    | i-SENSYS X C1333P       | i-SENSYS X C1936P     |
| i-SENSYS LBP620-serie | i-SENSYS MF650-serie    | i-SENSYS X C1533iF II   | i-SENSYS X C1946P     |
| i-SENSYS LBP630-serie | i-SENSYS MF832Cdw       | i-SENSYS X C1533P       |                       |
| i-SENSYS LBP660-serie | i-SENSYS MF842Cdw       | i-SENSYS X C1533P II    |                       |
| i-SENSYS LBP670-serie | i-SENSYS X C1127i-serie | i-SENSYS X C1538P       |                       |