

**MULTIMEDIA PROJECTOR
4K600STZ**

User Commands

Table of Contents

Table of Contents	ii
1. Overview	1
2. Communication Specifications	2
Communication Specifications	2
Usable Character Codes	4
Communication System (Serial)	5
Communication System (LAN)	5
Command Format	5
Response Format	6
Other Items	8
3. Communication Flow	9
Command Transmission (PC side)	9
Command Reception (projector side)	9
Command/Response	9
Response Reception Timeout	9
Other Items	9
4. Command List	10
5. Guide to Command Description	13
EXAMPLE	13
6. Command Details	15
6AXADJ	15
6AXR	16
6AXG	17
6AXB	18
6AXC	19
6AXM	20
6AXY	21
AMBADJ	22
AMBLEVEL	23
AMBTYP	24
ASELD1	25
ASELD2	26
ASELD3	27
ASELD4	28
ASELDX2	29
ASELDX4	30
ASELH1	31
ASELH2	32
ASELHX2	33
ASPECT	34
AVOL	35
BLANK	36
BRI	37
COLMTR	38

COLOR_TEMP	39
COMVER	40
CONT	41
DATE_FORMAT	42
DATE_TIME	43
DCONT	44
DGAMMA	45
ERR	46
FINE_GAMMA_R.....	47
FINE_GAMMA_G.....	48
FINE_GAMMA_B.....	49
FLTWRN	50
FREEZE	51
GAMMA	52
HDMIn_EDID	53
HDR	54
HDR_RANGE	55
HTMPINF	56
HUE	57
IMAGE	58
IMAGEFLIP	59
INPUT	60
IRIS	61
KREP	62
LIGHT	63
LIGHTLV	64
LPOSLD.....	65
MAIN	66
MEMF	68
MEMG.....	69
MEMS	70
MENU_RT.....	71
MUTE	72
NR.....	73
NRMPG.....	74
OPMODE	75
PJUSGT.....	76
POWER	77
PRODCODE	78
QSTRT.....	79
RC.....	80
RGBGAIN	82
RGBOFFSET	83
ROMVER	84
SAT	85
SAVEIMGPROF	86
SHARP.....	87
SIGMSG.....	88
SIGNAL_INFO	89
SIGNALSTATUS	90
SNTP	91
TEMP	92
TIME_ZONE	93
TPTN.....	94
TRGOUT.....	96

7. Error List.....	97
--------------------	----

8. Error Processing.....	98
--------------------------	----

1. Overview

These specifications describe the methods of controlling Projector 4K600STZ from PC or other controllers over an RS-232C or LAN connection.

■ Symbols

The following symbols are used in these specifications:


Symbol	Description
[]	Data in [] can be omitted.
	Same as OR.

2. Communication Specifications


Communication Specifications

The projector can be controlled via RS-232C or LAN connection.

PC - Projector connection configuration

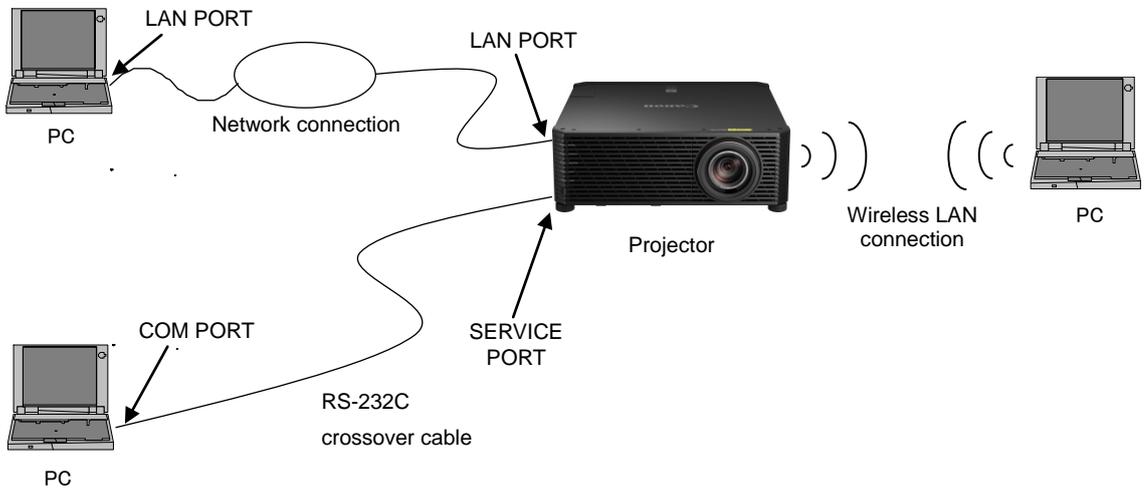

RS-232C connection	
Item	Specification
Connection system	PC and projector connected on a "1:1" basis
Connection signal line	3-line connection of SD, RD, and SG
Connection cable	9-pin RS-232C cable (crossover)

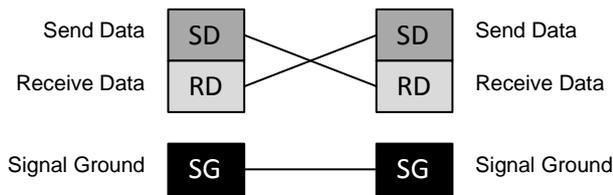

- * Signal lines other than the three SD, RD, and SG lines are not used in the projector.
- * Loop back its own signals on the PC side as necessary.

Wired LAN connection	
Item	Specification
Connection system	TCP/IP connection
Connection signal line	Straight when connecting via network
Connection cable	LAN cable
LAN	1000BASE-T 100BASE-TX 10BASE-T

* To use a wired LAN connection, the wireless side of “Network (wired/wireless)” on the projector must be set to “Infra” or “Pj AP”.

In addition, configure the network properly between the projector and the PC.

Wireless LAN connection	
Item	Specification
Connection system	802.11bgn

* To use a wireless LAN connection, the wireless side of “Network (wired/wireless)” on the projector must be set to “Infra” or “Pj AP”.

Usable Character Codes

Use ASCII codes in the red and blue areas of the following table.

No distinction is made between double-byte characters and single-byte characters. All characters are interpreted as single-byte characters, so do not use double-byte or triple-byte characters.

Uppercase and lowercase alphabet letters are recognized as the same character.

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NUL		SP	0	@	P	`	p								
1			!	1	A	Q	a	q								
2			"	2	B	R	b	r								
3			#	3	C	S	c	s								
4			\$	4	D	T	d	t								
5			%	5	E	U	e	u								
6			&	6	F	V	f	v								
7			'	7	G	W	g	w								
8			(8	H	X	h	x								
9)	9	I	Y	i	y								
A			*	:	J	Z	j	z								
B			+	;	K	[k	{								
C			,	<	L	\	l									
D	CR		-	=	M]	m	}								
E			.	>	N	^	n	~								
F			/	?	O	_	o									

Item	Specifications
Delimiters	CR(0Dh) Characters usable as delimiters.
General characters	20h to 60h, 7Bh to 7Eh Characters usable in commands.
Invalid characters	Characters that are invalid. If used, it will be handled as a space (20h).
Unrecommended characters	Do not use as a general rule. Both upper case and lower case letters can be used in commands, but upper case should be used in most cases.

Communication System (Serial)

Item	Specification
Communication mode	RS-232-C Start-stop synchronization half-duplex communication
Transmission speed	19.2 Kbps
Character length	8 bits/character
Stop bit	This value follows the set value of projector. Default: 1bit
Parity	None
Command format	Variable-length records with terminals as delimiters
Maximum transmission length	Maximum of 256 characters (bytes) including delimiters.
Delimiters	CR (0Dh) can be used as a delimiter. Delimiter in the response is CR.
Command code	ASCII codes (20h to 7Eh) Codes other than ASCII codes (20h to 7Eh), delimiter code (0Dh), or NUL (00h) are handled as spaces (20h).
Communication procedure	No procedure
Flow control	None
Error control	None
Break signal	Not supported
Timeout	Tc Between characters: 1 second
	Tr Between command/response interval: 15 seconds

* For timeout, see chapter 3, "Communication Flow" on page 9.

Communication System (LAN)

Item	Specification
Communication mode	TCP/IP connection. Port: 33336
Remarks	If a command is not received for 30 seconds, the socket will be closed.

Command Format

Format

Commands are sent from PC to the projector in the following format:

<command text><delimiter> or
<command text>=(value)<delimiter>

<command text>	Character strings consisting of 1 or more alphanumeric letters
<value>	Character strings consisting of 1 or more alphanumeric letters
<delimiter>	CR(0Dh)

For <command strings> and <value>, see explanation about each command.

Example) When checking the power status (POWER)

PC → PJ

G	E	T	=	P	O	W	E	R	CR
47h	45h	54h	3Dh	50h	4Fh	57h	45h	52h	0Dh

Response Format

Commands are sent from the projector to PC in the following format:

<Response character string> <Delimiter>

There are multiple response types, each having different <response string> format.

<Response character string>	Character strings consisting of 1 or more alphanumeric letters First 2 digits are always 1 lowercase alphabet letter and a ":" (colon). The first character indicates the response type.		
	Response type	Meaning	Example
	i	Normal response	i:OK
	g	Reference command response	g:BRI=0
	e	Error response	e:0002 INVALID_COMMAND
<delimiter>	CR(0Dh)		

Format varies according to the type, as follows:

Normal response

A response when command is processed normally.

The projector receives the next command only after receiving this response.

Format)

i:OK<delimiter>

Example)

PC → PJ

P	O	W	E	R	=	O	N	CR
50h	4Fh	57h	45h	52h	3Dh	4Fh	4Eh	0Dh

PC ← PJ

i	:	O	K	CR
69h	3Ah	4Fh	4Bh	0Dh

Reference command response

A response when reference is made properly for a reference command.

Format)

g:<command string>=<value><delimiter>

Example)

PC → PJ

G	E	T	=	P	O	W	E	R	CR
47h	45h	54h	3Dh	50h	4Fh	57h	45h	52h	0Dh

PC ← PJ

g	:	P	O	W	E	R	=	O	N	CR
67h	3Ah	50H	4Fh	57h	45h	52h	3Dh	4Fh	4Eh	0Dh

Error response

A response when an error occurred.

Format)

e:<error ID><space><error info string><delimiter>

<error ID>	4 alphanumeric letters
<space>	Space character (20h)
<error info string>	Character strings consisting of 1 or more alphanumeric letters

* Refer to "Error List"

Example)

PC → PJ

A	U	T	O	P	C	CR
41h	55h	54h	4Fh	50h	43h	0Dh

PC ← PJ

e	:	2	0	1	F		I	N	V	A	L	I	D	_
65h	3Ah	32h	30h	31h	46h	20h	49h	4Eh	56h	41h	4Ch	49h	44h	5Fh
S	I	G	N	A	L	CR								
53h	49h	47h	4Eh	41h	4Ch	0Dh								

Normal response (BUSY)

This response is sent when a command cannot be received during processing.

Format)

i:BUSY<delimiter>

Example)

PC → PJ

A	U	T	O	P	C	CR
41h	55h	54h	4Fh	50h	43h	0Dh

PC ← PJ

i	:	B	U	S	Y	CR
69h	3Ah	42h	55h	53h	59h	0Dh

Other Items

■ Command recognition

The receiver (projector) retains incoming characters within a specific Tc, and recognizes the data as "received command" when delimiter is received.

If the character interval received exceeds the Tc or if a delimiter is not received within 256 characters, all data already received is lost, and the mode is reset to standby to receive commands again.

■ Parameter value

Definition of <Parameter value> is as follows:

<value>	<value 1>, <value 2>..., <value n>
<value n>	<Numerical value> <ID> "<Character string>"
<numerical value>	[<sign>]<decimal numeric string > The decimal string consists of minimum 1 letter and maximum 5 letters. Valid value range is -32768 to 32767.
<ID>	1 or more ASCII characters (20h to 60h, 7Bh to 7Eh)
<character string>	0 or more ASCII characters (20h to 60h, 7Bh to 7Eh)

3. Communication Flow

Command Transmission (PC side)

Commands should be sent from PC in a way that each character is sent within the specified Tc (inter-character timeout).


Command Reception (projector side)

The projector retains incoming characters within a specific Tc, and recognizes the data as "received command" when delimiter is received.

If the character interval received exceeds the Tc or if a delimiter is not received within 256 characters, all data already received is lost, and the mode is reset to standby to receive commands again.

Command/Response

A response is always returned within Tr(*) for a command sent from the PC.

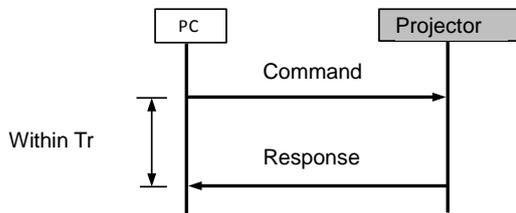

(*) The timeout interval between command and response (Tr) is 15 seconds.

Response Reception Timeout

If a response is not received within the Tr (timeout interval between command and response) while standing by a waiting response after sending a command from the PC, it is deemed to have exceeded the "response reception timeout." Please resend the command.


Other Items

To execute commands via LAN, the LAN function must be enabled in advance.

When the projector is in standby mode, only a portion of the commands can be executed.

The PC side cannot send the next user command before a response for the first command is returned. If two or more user commands are received, user commands from 2nd one are discarded. If 2 or more user commands are received, only the 1st command is processed, and a response is returned when finished.

For commands sent via LAN, if multiple commands are embedded in a single packet, the projector processes the first command and discards the rest.

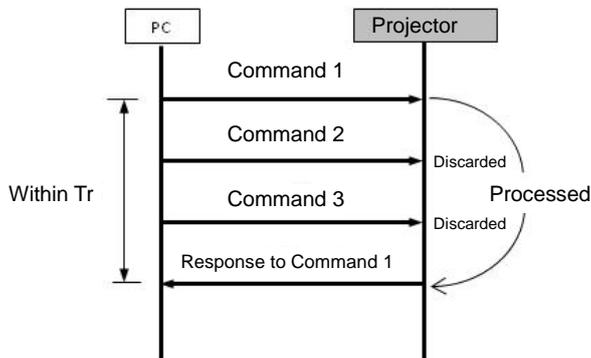

4. Command List

Item	Command	Setting	Reference	Description	Power mode restriction												
					LAN				WiFi				RS-232C				
					SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON
1	<u>6AXADJ</u>	Yes	Yes	6-axis color adjustment	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
2	<u>6AXR</u>	Yes	Yes	6-axis color adjustment R hue/saturation/brightness	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
3	<u>6AXG</u>	Yes	Yes	6-axis color adjustment G hue/saturation/brightness	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
4	<u>6AXB</u>	Yes	Yes	6-axis color adjustment B hue/saturation/brightness	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
5	<u>6AXC</u>	Yes	Yes	6-axis color adjustment C hue/saturation/brightness	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
6	<u>6AXM</u>	Yes	Yes	6-axis color adjustment M hue/saturation/brightness	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
7	<u>6AXY</u>	Yes	Yes	6-axis color adjustment Y hue/saturation/brightness	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
8	<u>AMBADJ</u>	Yes	Yes	Ambient light correction adjustment ON/OFF	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
9	<u>AMBLEVEL</u>	Yes	Yes	Ambient light level settings	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
10	<u>AMBTYP</u>	Yes	Yes	Ambient light type settings	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
11	<u>ASELD1</u>	Yes	Yes	DVI-1 Audio input terminal selection	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
12	<u>ASELD2</u>	Yes	Yes	DVI-2 Audio input terminal selection	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
13	<u>ASELD3</u>	Yes	Yes	DVI-3 Audio input terminal selection	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
14	<u>ASELD4</u>	Yes	Yes	DVI-4 Audio input terminal selection	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
15	<u>ASELDX2</u>	Yes	Yes	DVI 1x2 Audio input terminal selection	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
16	<u>ASELDX4</u>	Yes	Yes	DVI 2x2 / 1x4 Audio input terminal selection	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
17	<u>ASELH1</u>	Yes	Yes	HDMI-1 audio input terminal selection	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
18	<u>ASELH2</u>	Yes	Yes	HDMI-2 audio input terminal selection	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
19	<u>ASELHX2</u>	Yes	Yes	HDMIx2 audio input terminal selection	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
20	<u>ASPECT</u>	Yes	Yes	Aspect ratio	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
21	<u>AVOL</u>	Yes	Yes	Audio volume adjustment	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
22	<u>BLANK</u>	Yes	Yes	Screen blank	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
23	<u>BRI</u>	Yes	Yes	Brightness setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
24	<u>COLMTR</u>	Yes	Yes	Colorimetry	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
25	<u>COLOR_TEMP</u>	Yes	Yes	Color temperature setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
26	<u>COMVER</u>	-	Yes	User command version inquiry	-	Yes	Yes	Yes	Yes	-	-	-	-	Yes	Yes	Yes	Yes
27	<u>CONT</u>	Yes	Yes	Contrast setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
28	<u>DATE_FORMAT</u>	Yes	Yes	Date display format	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
29	<u>DATE_TIME</u>	Yes	Yes	Date/time setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
30	<u>DCONT</u>	Yes	Yes	Dynamic contrast	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
31	<u>DGAMMA</u>	Yes	Yes	Dynamic gamma	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
32	<u>ERR</u>	-	Yes	Error information inquiry	-	Yes	Yes	Yes	Yes	-	-	-	-	Yes	Yes	Yes	Yes
33	<u>FINE_GAMMA_R</u>	Yes	Yes	Fine gamma (R)	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
34	<u>FINE_GAMMA_G</u>	Yes	Yes	Fine gamma (G)	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes

Item	Command	Setting	Reference	Description	Power mode restriction												
					LAN					WiFi					RS-232C		
					SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON
35	<u>FINE_GAMMA_B</u>	Yes	Yes	Fine gamma (B)	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
36	<u>FLTWRN</u>	Yes	Yes	Air filter warning	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
37	<u>FREEZE</u>	Yes	Yes	Screen freeze	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
38	<u>GAMMA</u>	Yes	Yes	Gamma adjustment	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
39	<u>HDMIn_EDID</u>	Yes	Yes	HDMIn_EDID mode	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
40	<u>HDR</u>	Yes	Yes	HDR setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
41	<u>HDR_RANGE</u>	Yes	Yes	HDR range	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
42	<u>HTMPINF</u>	Yes	Yes	High temperature caution display	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
43	<u>HUE</u>	Yes	Yes	Hue setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
44	<u>IMAGE</u>	Yes	Yes	Image mode setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
45	<u>IMAGEFLIP</u>	Yes	Yes	Flip display	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
46	<u>INPUT</u>	Yes	Yes	Input signal selection	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
47	<u>IRIS</u>	Yes	Yes	Iris setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
48	<u>KREP</u>	Yes	Yes	Key repeat	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
49	<u>LIGHT</u>	Yes	Yes	Light source mode	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
50	<u>LIGHTLV</u>	Yes	Yes	Light level	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
51	<u>LPOSLD</u>	Yes	-	Lens-position load	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
52	<u>MAIN</u>	Yes	-	Unit control panel emulation	-	Yes	Yes	Yes	Yes	-	-	-	-	Yes	Yes	Yes	Yes
53	<u>MEMF</u>	Yes	Yes	Memory color adjustment (flesh)	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
54	<u>MEMG</u>	Yes	Yes	Memory color adjustment (green)	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
55	<u>MEMS</u>	Yes	Yes	Memory color adjustment (sky)	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
56	<u>MENU_RT</u>	Yes	Yes	Menu rotation	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
57	<u>MUTE</u>	Yes	Yes	Audio mute	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
58	<u>NR</u>	Yes	Yes	Random noise reduction	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
59	<u>NRMPG</u>	Yes	Yes	MPEG noise reduction	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
60	<u>OPMODE</u>	Yes	Yes	Operation mode	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
61	<u>PJUSGT</u>	-	Yes	Projector usage time query	-	Yes	Yes	Yes	Yes	-	-	-	-	Yes	Yes	Yes	Yes
62	<u>POWER</u>	Yes	Yes	Power supply control	-	Yes	Yes	Yes	Yes	-	-	-	-	Yes	Yes	Yes	Yes
63	<u>PRODCODE</u>	-	Yes	Product name inquiry	-	Yes	Yes	Yes	Yes	-	-	-	-	Yes	Yes	Yes	Yes
64	<u>QSTRT</u>	Yes	Yes	High-speed start	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
65	<u>RC</u>	Yes	-	Remote control operation emulate	-	Yes	Yes	Yes	Yes	-	-	-	-	Yes	Yes	Yes	Yes
66	<u>RGBGAIN</u>	Yes	Yes	RGB gain adjustment	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
67	<u>RGBOFFSET</u>	Yes	Yes	RGB offset adjustment	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
68	<u>ROMVER</u>	-	Yes	Firmware version inquiry	-	Yes	Yes	Yes	Yes	-	-	-	-	Yes	Yes	Yes	Yes
69	<u>SAT</u>	Yes	Yes	Color saturation setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
70	<u>SAVEIMGPROF</u>	Yes	Yes	User memory creation/storage/deletion	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
71	<u>SHARP</u>	Yes	Yes	Sharpness setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
72	<u>SIGMSG</u>	Yes	Yes	Input status display	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
73	<u>SIGNAL_INFO</u>	-	Yes	Displayed signal information inquiry	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
74	<u>SIGNALSTATUS</u>	-	Yes	Signal detection inquiry	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
75	<u>SNTP</u>	Yes	Yes	SNTP setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
76	<u>TEMP</u>	-	Yes	Temperature sensor value inquiry	-	-	Yes	Yes	Yes	-	-	-	-	Yes	Yes	Yes	Yes
77	<u>TIME_ZONE</u>	-	Yes	Time zone setting value reference	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes

Item	Command	Setting	Reference	Description	Power mode restriction												
					LAN				WiFi				RS-232C				
					SL0	SL1	SL3/SFB	PM	ON	SL0	SL1	SL3/SFB	PM	ON	ST	PM	ON
78	<u>TPTN</u>	Yes	Yes	Test pattern	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes
79	<u>TRGOUT</u>	Yes	Yes	Trigger out setting	-	-	-	-	Yes	-	-	-	-	Yes	-	-	Yes

Note: About "Power mode restriction"

Commands are executable only when the projector is in the mode indicated by "Yes." Meaning of each mode is as follows:

Power mode restriction/LAN: Indicates whether the command coming through LAN is executable.

SL0: Standby mode, and the network function is turned off. When the network function is turned off, the command is not executable if coming from LAN, in which case, this should never be "Yes".

SL1: Standby mode, and the network standby setting is set to "Eco."

SL3/SFB: Standby mode, and the network standby setting is set to "Normal" or high-speed start is set to "ON."

PM: Power management "lamp off."

ON: Normal projection status

Power/WiFi: Indicates whether the command coming through WiFi is executable.

Power/RS-232C: Indicates whether the command coming through RS-232C is executable.

ST: Standby mode (includes SL0, SL1 and SL3 altogether, regardless of the network setting).

5. Guide to Command Description

This section explains how commands are described.
The command descriptions have the format shown below.

EXAMPLE

Summary of the function

Format

Setting	Command	A command format when a command is sent to the projector to make a setting for the function. "-" is shown when there is no setting command. Example) 6AXADJ=<6-axis adjustment parameter:
	Response	A response format for the setting command. "-" is shown when there is no setting command. Example) i:OK
Reference	Command	A command format when a command is sent to the projector to refer to the current setting, status and others for the function. "-" is shown when there is no reference command. Example) GET=6AXADJ
	Response	A response format for a reference command. "-" is shown when there is no reference command. Example) g:6AXADJ=<6-axis adjustment parameter:

Note: See "Error list" for any response other than the above.

When parameters exist for the command, a list of parameter is inserted in this position.

Example)

<6-axis adjustment parameter:ID>

Parameter	Meaning
ON	Valid
OFF	Invalid

Environment

This defines the environments that support the command (power supply state, input signal state). The command is executable when the projector is in the mode indicated by "Yes" in the table of corresponding command description page.

Power mode restriction												Input			
LAN*1					WiFi*7					RS-232C*8					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
*2	*3	*4	*5	*6	*2	*3	*4	*5	*6	*9	*5	*6	*10	*10	*10

- *1 Power mode restriction/LAN
Indicates whether the command coming through LAN is executable.
- *2 SL0
Standby mode, and the network function is turned off.
In real terms, this should never be "Yes".
- *3 SL1
Standby mode, and the network standby setting is set to "Eco."
- *4 SL3/SFB
Standby mode, and the network standby setting is set to "Normal" or high-speed start is set to "ON."
- *5 PM
Power management "lamp off."
- *6 ON
Normal projection status
- *7 Power mode restriction/Wifi
Indicates whether the command coming through WiFi is executable.
- *8 Power mode restriction/RS-232C
Indicates whether the command coming through RS-232C is executable.
- *9 ST
Standby mode (includes SL0, SL1 and SL3 altogether, regardless of the network setting).
- *10 Input
Valid when the projector is in the input signal mode indicated by "Yes". Invalid when the projector is in the input signal mode indicated by "No".

Remarks

The descriptions on command functions, conditions, and important points are provided.

Example

The examples of use of the command are provided.

6. Command Details

6AXADJ

6-axis color adjustment

Format

Setting	Command	6AXADJ=<6-axis adjustment parameter: ID>
	Response	i:OK
Reference	Command	GET=6AXADJ
	Response	g:6AXADJ=<6-axis adjustment parameter: ID>

Note: See "Error list" for any response other than the above.

<6-axis adjustment parameter:ID>

Parameter	Meaning
ON	Adjusted
OFF	Turned off

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) Use "6AXR - Y" command when this is set to "ON" and the corrected 6-axis values need to be changed.
- (2) This sets the currently selected input signal and image mode.

Example

(Control)

> 6AXADJ=ON Sets 6-axis color adjustment to ON.
 < i:OK

(Reference)

> GET=6AXADJ References the 6-axis color adjustment ON/OFF setting.
 < g:6AXADJ=ON

Note: '>' indicates a command; '<' indicates a response.

6AXR

6-axis adjustment (red), hue/saturation/brightness

Format

Setting	Command	6AXR=<R hue:Number>,<R saturation:Number>, <R brightness:Number>
	Response	i:OK
Reference	Command	GET=6AXR
	Response	g:6AXR=<R hue:Number>,<R saturation:Number>, <R brightness:Number>

Note: See "Error list" for any response other than the above.

<R hue:Number> is within -20 to 20.

<R saturation:Number> is within -20 to 20.

<R brightness:Number> is within -20 to 20.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) When 6-axis adjustment is turned on, these settings are shown over the displayed image. However, the settings can be changed regardless of whether 6-axis adjustment is turned on or not.
- (2) This sets the currently selected input signal and image mode.

Example

(Setting)

>6AXR=-8,5,3 Sets the R hue to -8, saturation to 5 and brightness to 3.
< i:OK

(Reference)

> GET=6AXR References the R hue, saturation and brightness.
< g:6AXR=-8,5,3

Note: '>' indicates a command; '<' indicates a response.

6AXG

6-axis adjustment (green), hue/saturation/brightness

Format

Setting	Command	6AXG=<G hue:Number>,<G saturation:Number>,<G brightness:Number>
	Response	i:OK
Reference	Command	GET=6AXG
	Response	g:6AXG=<G hue:Number>,<G saturation:Number>,<G brightness:Number>

Note: See "Error list" for any response other than the above.

<G hue:Number> is within -20 to 20.

<G saturation:Number> is within -20 to 20.

<G brightness:Number> is within -20 to 20.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) When 6-axis adjustment is turned on, these settings are shown over the displayed image. However, the settings can be changed regardless of whether 6-axis adjustment is turned on or not.
- (2) This sets the currently selected input signal and image mode.

Example

(Setting)

>6AXG=-8,5,3 Sets the G hue to -8, saturation to 5 and brightness to 3.
< i:OK

(Reference)

> GET=6AXG References the G hue, saturation and brightness.
< g:6AXG=-8,5,3

Note: '>' indicates a command; '<' indicates a response.

6AXB

6-axis adjustment (blue), hue/saturation/brightness

Format

Setting	Command	6AXB=<B hue:Number>,<B saturation:Number>,<B brightness:Number>
	Response	i:OK
Reference	Command	GET=6AXB
	Response	g:6AXB=<B hue:Number>,<B saturation:Number>,<B brightness:Number>

Note: See "Error list" for any response other than the above.

<B hue:Number> is within -20 to 20.

<B saturation:Number> is within -20 to 20.

<B brightness:Number> is within -20 to 20.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) When 6-axis adjustment is turned on, these settings are shown over the displayed image. However, the settings can be changed regardless of whether 6-axis adjustment is turned on or not.
- (2) This sets the currently selected input signal and image mode.

Example

(Setting)

>6AXB=-8,5,3 Sets the B hue to -8, saturation to 5 and brightness to 3.
< i:OK

(Reference)

> GET=6AXB References the B hue, saturation and brightness.
< g:6AXB=-8,5,3

Note: '>' indicates a command; '<' indicates a response.

6AXC

6-axis adjustment (cyan), hue/saturation/brightness

Format

Setting	Command	6AXC=<C hue:Number>,<C saturation:Number>,<C brightness:Number>
	Response	i:OK
Reference	Command	GET=6AXC
	Response	g:6AXC=<C hue:Number>,<C saturation:Number>,<C brightness:Number>

Note: See "Error list" for any response other than the above.

<C hue:Number> is within -20 to 20.

<C saturation:Number> is within -20 to 20.

<C brightness:Number> is within -20 to 20.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) When 6-axis adjustment is turned on, these settings are shown over the displayed image. However, the settings can be changed regardless of whether 6-axis adjustment is turned on or not.
- (2) This sets the currently selected input signal and image mode.

Example

(Setting)

>6AXC=-8,5,3 Sets the C hue to -8, saturation to 5 and brightness to 3.
< i:OK

(Reference)

> GET=6AXC References the C hue, saturation and brightness.
< g:6AXC=-8,5,3

Note: '>' indicates a command; '<' indicates a response.

6AXM

6-axis adjustment (magenta), hue/saturation/brightness

Format

Setting	Command	6AXM=<M hue:Number>,<M saturation:Number>,<M brightness:Number>
	Response	i:OK
Reference	Command	GET=6AXM
	Response	g:6AXM=<M hue:Number>,<M saturation:Number>,<M brightness:Number>

Note: See "Error list" for any response other than the above.

<M hue:Number> is within -20 to 20.

<M saturation:Number> is within -20 to 20.

<M brightness:Number> is within -20 to 20.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) When 6-axis adjustment is turned on, these settings are shown over the displayed image. However, the settings can be changed regardless of whether 6-axis adjustment is turned on or not.
- (2) This sets the currently selected input signal and image mode.

Example

(Setting)

>6AXM=-8,5,3 Sets the M hue to -8, saturation to 5 and brightness to 3.
< i:OK

(Reference)

> GET=6AXM References the M hue, saturation and brightness.
< g:6AXM=-8,5,3

Note: '>' indicates a command; '<' indicates a response.

6AXY

6-axis adjustment (yellow), hue/saturation/brightness

Format

Setting	Command	6AXY=<Y hue:Number>,<Y saturation:Number>,<Y brightness:Number>
	Response	i:OK
Reference	Command	GET=6AXY
	Response	g:6AXY=<Y hue:Number>,<Y saturation:Number>,<Y brightness:Number>

Note: See "Error list" for any response other than the above.

- <Y hue:Number> is within -20 to 20.
- <Y saturation:Number> is within -20 to 20.
- <Y brightness:Number> is within -20 to 20.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) When 6-axis adjustment is turned on, these settings are shown over the displayed image. However, the settings can be changed regardless of whether 6-axis adjustment is turned on or not.
- (2) This sets the currently selected input signal and image mode.

Example

(Setting)

>6AXY=-8,5,3 Sets the Y hue to -8, saturation to 5 and brightness to 3.
< i:OK

(Reference)

> GET=6AXY References the Y hue, saturation and brightness.
< g:6AXY=-8,5,3

Note: '>' indicates a command; '<' indicates a response.

AMBADJ

Ambient light correction adjustment

Format

Setting	Command	AMBADJ=<Ambient light correction adjustment parameter:ID>
	Response	i:OK
Reference	Command	GET=AMBADJ
	Response	g:AMBADJ=<Ambient light correction adjustment parameter:ID>

Note: See "Error list" for any response other than the above.

< Ambient light correction adjustment parameter:ID >

Parameter	Meaning
ON	Adjusted
OFF	Turned off

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) Ambient light level and "Ambient light type" settings take effect on the displayed image when "Ambient light correction" is activated.
To adjust the "Ambient light level" or "Ambient light type", use "AMBLEVEL" or "AMBTYP" command, respectively.
- (2) This sets the currently selected input signal and image mode.

Example

(Control)

> AMBADJ=ON Sets the ambient light correction to ON.
< i:OK

(Reference)

> GET=AMBADJ References the ambient light correction ON/OFF setting.
< g:AMBADJ=ON

Note: '>' indicates a command; '<' indicates a response.

AMBLEVEL

Ambient light level settings

Format

Setting	Command	AMBLEVEL=<Ambient light level settings parameter:ID>
	Response	i:OK
Reference	Command	GET=AMBLEVEL
	Response	g: AMBLEVEL=<Ambient light level settings parameter:ID>

Note: See "Error list" for any response other than the above.

< Ambient light level settings parameter:ID >

Parameter	Meaning
WEAK	Ambient light level is set to weak.
STRONG	Ambient light level is set to strong.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

>AMBLEVEL=WEAK Sets the ambient light level to WEAK.
< i:OK

(Reference)

> GET=AMBLEVEL References the ambient light level.
< g:AMBLEVEL=WEAK

Note: '>' indicates a command; '<' indicates a response.

AMBTYPER

Ambient light type settings

Format

Setting	Command	AMBTYPER=<Ambient light type settings parameter:ID>
	Response	i:OK
Reference	Command	GET=AMBTYPER
	Response	g: AMBTYPER=<Ambient light type settings parameter:ID>

Note: See "Error list" for any response other than the above.

< Ambient light type settings parameter:ID >

Parameter	Meaning
TG	Tungsten lamp
FL	Fluorescent lamp

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

>AMBTYPER=FL Sets the ambient light type setting to "fluorescent lamp".
 < i:OK

(Reference)

> GET=AMBTYPER References the ambient light type setting.
 < g:AMBTYPER=FL

Note: '>' indicates a command; '<' indicates a response.

ASELD1

DVI-1 audio terminal selection

Format

Setting	Command	ASELD1=<Digital PC audio terminal selection parameter:ID>
	Response	i:OK
Reference	Command	GET=ASELD1
	Response	g: ASELD1=<Digital PC audio terminal selection parameter:ID>

Note: See "Error list" for any response other than the above.

<Digital PC audio terminal selection parameter:ID>

Parameter	Meaning
1	Audio In 1
OFF	Turned off

Environment

Powe mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM				ON
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>ASELD1=1 Sets the digital PC 1 audio input terminal selection to "Audio In 1".
 < i:OK

(Reference)

> GET=ASELD1 References the digital PC 1 audio input terminal selection.
 < g:ASELD1=1

Note: '>' indicates a command; '<' indicates a response.

ASELD2

DVI-2 audio terminal selection

Format

Setting	Command	ASELD2=<Digital PC audio terminal selection parameter:ID>
	Response	i:OK
Reference	Command	GET=ASELD2
	Response	g:ASELD2=<Digital PC audio terminal selection parameter:ID>

Note: See "Error list" for any response other than the above.

<Digital PC audio terminal selection parameter:ID>

Parameter	Meaning
1	Audio In 1
OFF	Turned off

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM				ON
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>ASELD2=1 Sets the digital PC 2 audio input terminal selection to "Audio In 1".
< i:OK

(Reference)

> GET=ASELD2 References the digital PC 2 audio input terminal selection.
< g:ASELD2=1

Note: '>' indicates a command; '<' indicates a response.

ASELD3

DVI-3 Audio input terminal selection

Format

Setting	Command	ASELD3=<Digital PC audio terminal selection parameter:ID>
	Response	i:OK
Reference	Command	GET=ASELD3
	Response	g: ASELD3=<Digital PC audio terminal selection parameter:ID>

Note: See "Error list" for any response other than the above.

< Digital PC audio terminal selection parameter:ID>

Parameter	Meaning
1	Audio In 1
OFF	Turned off

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM				ON
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>ASELD3=1 Sets the digital PC 3 audio input terminal selection to "Audio In 1".
 < i:OK

(Reference)

> GET=ASELD3 References the digital PC 3 audio input terminal selection.
 < g:ASELD3=1

Note: '>' indicates a command; '<' indicates a response.

ASELD4

DVI-4 Audio input terminal selection

Format

Setting	Command	ASELD4=<Digital PC audio terminal selection parameter:ID>
	Response	i:OK
Reference	Command	GET=ASELD4
	Response	g:ASELD4=<Digital PC audio terminal selection parameter:ID>

Note: See "Error list" for any response other than the above.

< Digital PC audio terminal selection parameter:ID>

Parameter	Meaning
1	Audio In 1
OFF	Turned off

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM				ON
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>ASELD4=1 Sets the digital PC 4 audio input terminal selection to "Audio In 1".
 < i:OK

(Reference)

> GET=ASELD4 References the digital PC 4 audio input terminal selection.
 < g:ASELD4=1

Note: '>' indicates a command; '<' indicates a response.

ASELDX2

DVI 1x2 Audio input terminal selection

Format

Setting	Command	ASELDX2=<Digital PC audio terminal selection parameter:ID>
	Response	i:OK
Reference	Command	GET=ASELDX2
	Response	g:ASELDX2=<Digital PC audio terminal selection parameter:ID>

Note: See "Error list" for any response other than the above.

< Digital PC audio terminal selection parameter:ID>

Parameter	Meaning
1	Audio In 1
OFF	Turned off

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM				ON
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>ASELDX2=1 Sets the digital PC x2 audio input terminal selection to "Audio In 1".
 < i:OK

(Reference)

> GET=ASELDX2 References the digital PC x2 audio input terminal selection.
 < g:ASELDX2=1

Note: '>' indicates a command; '<' indicates a response.

ASELDX4

DVI 2x2 / 1x4 Audio input terminal selection

Format

Setting	Command	ASELDX4=<Digital PC audio terminal selection parameter:ID>
	Response	i:OK
Reference	Command	GET=ASELDX4
	Response	g:ASELDX4=<Digital PC audio terminal selection parameter:ID>

Note: See "Error list" for any response other than the above.

< Digital PC audio terminal selection parameter:ID>

Parameter	Meaning
1	Audio In 1
OFF	Turned off

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM				ON
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

> ASELDX4=1 Sets the digital PC x4 audio input terminal selection to "Audio In 1".

< i:OK

(Reference)

> GET=ASELDX4 References the digital PC x4 audio input terminal selection.

< g:ASELDX4=1

Note: '>' indicates a command; '<' indicates a response.

ASELH1

HDMI-1 audio input terminal selection

Format

Setting	Command	ASELH1=<HDMI audio terminal selection parameter:ID>
	Response	i:OK
Reference	Command	GET=ASELH1
	Response	g:ASELH1=<HDMI audio terminal selection parameter:ID>

Note: See "Error list" for any response other than the above.

<HDMI audio terminal selection parameter:ID>

Parameter	Meaning
H1	HDMI1 audio
1	Audio In 1
OFF	Turned off

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>ASELH1=H1 Sets the HDMI 1 audio input terminal selection to "HDMI 1 audio".
 < i:OK

(Reference)

> GET=ASELH1 References the HDMI 1 audio input terminal selection.
 < g:ASELH1=H1

Note: '>' indicates a command; '<' indicates a response.

ASELH2

HDMI-2 audio input terminal selection

Format

Setting	Command	ASELH2=<HDMI audio terminal selection parameter:ID>
	Response	i:OK
Reference	Command	GET=ASELH2
	Response	g:ASELH2=<HDMI audio terminal selection parameter:ID>

Note: See "Error list" for any response other than the above.

<HDMI audio terminal selection parameter:ID>

Parameter	Meaning
H2	HDMI2 audio
OFF	Turned off

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM				ON
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>ASELH2=H2 Sets the HDMI 2 audio input terminal selection to "HDMI 1 audio".
 < i:OK

(Reference)

> GET=ASELH2 References the HDMI 2 audio input terminal selection.
 < g:ASELH2=H2

Note: '>' indicates a command; '<' indicates a response.

ASELHX2

HDMIx2 audio input terminal selection

Format

Setting	Command	ASELHX2=<HDMI audio terminal selection parameter:ID>
	Response	i:OK
Reference	Command	GET=ASELHX2
	Response	g:ASELHX2=<HDMI audio terminal selection parameter:ID>

Note: See "Error list" for any response other than the above.

<HDMI audio terminal selection parameter:ID>

Parameter	Meaning
H1	HDMI1 audio
H2	HDMI2 audio
1	Audio in 1
OFF	Turned off

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>ASELHX2=H2 Sets the HDMI x2 audio input terminal selection to "HDMI 2 audio".
< i:OK

(Reference)

> GET=ASELHX2 References the HDMI x2 audio input terminal selection.
< g:ASELHX2=H2

Note: '>' indicates a command; '<' indicates a response.

ASPECT

Aspect ratio

Format

Setting	Command	ASPECT=<Screen setting parameters:ID>
	Response	i:OK
Reference	Command	GET=ASPECT
	Response	g:ASPECT=<Screen setting parameters:ID>

Note: See "Error list" for any response other than the above.

< Screen setting parameters:ID >

Parameter	Meaning
AUTO	Auto
TRUE	Real

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) Aspect setting may be automatically changed by other setting when the input terminal is changed or input signal is disturbed.

Example

(Setting)
 >ASPECT=AUTO Sets the aspect ratio to AUTO.
 < i:OK

(Reference)
 > GET=ASPECT References the aspect ratio.
 < g:ASPECT=AUTO

Note: '>' indicates a command; '<' indicates a response.

AVOL

Audio volume adjustment

Format

Setting	Command	AVOL=<Audio volume:Number>
	Response	i:OK
Reference	Command	GET= AVOL
	Response	g:AVOL=<Audio volume:Number>

Note: See "Error list" for any response other than the above.

Setting values for <Audio volume:Number> are 0 to 20.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) Audio mute setting is canceled if audio volume is adjusted during audio mute.

Example

(Setting)

>AVOL=10 Sets the audio volume to 10.

< i:OK

(Reference)

> GET=AVOL References the audio volume.

< g:AVOL=10

Note: '>' indicates a command; '<' indicates a response.

BLANK

Screen blank

Format

Setting	Command	BLANK=<BLANK parameter:ID>
	Response	i:OK
Reference	Command	GET=BLANK
	Response	g:BLANK=<BLANK parameter:ID>

Note: See "Error list" for any response other than the above.

< BLANK parameter:ID >

Parameter	Meaning
ON	BLANK ON
OFF	BLANK OFF

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) Executing this command in a FREEZE status will cancel the FREEZE status and become BLANK.

Example

(Setting)

> BLANK=ON Sets screen blank to ON.

< i:OK

(Reference)

> GET=BLANK References the current screen blank status.

< g:BLANK=ON

Note: '>' indicates a command; '<' indicates a response.

BRI

Brightness setting

Format

Setting	Command	BRI=<Brightness setting:Number>
	Response	i:OK
Reference	Command	GET=BRI
	Response	g:BRI=<Brightness setting:Number>

Note: See "Error list" for any response other than the above.

Setting values for <Brightness setting:Number> are -20 to 20.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

> BRI=3 Sets the brightness to 3.

< i:OK

(Reference)

> GET=BRI References the brightness.

< g:BRI=3

Note: '>' indicates a command; '<' indicates a response.

COLMTR

Colorimetry

Format

Setting	Command	COLMTR=<Colorimetry setting parameter:ID>
	Response	i:OK
Reference	Command	GET=COLMTR
	Response	g:COLMTR=<Colorimetry setting parameter:ID>

Note: See "Error list" for any response other than the above.

<Colorimetry setting parameter:ID>

Parameter	Meaning
AUTO	Automatic setting
BT2020	BT.2020 color space setting
BT709	BT.709 color space setting

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	No	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

> COLMTR=AUTO Sets colorimetry to AUTO.
< i:OK

(Reference)

> GET=COLMTR References the setting status of the colorimetry setting.
< g:COLMTR=AUTO

Note: '>' indicates a command; '<' indicates a response.

COLOR_TEMP

Color temperature setting

Format

Setting	Command	COLOR_TEMP=<Color temperature setting:Number>
	Response	i:OK
Reference	Command	GET=COLOR_TEMP
	Response	g:COLOR_TEMP=<Color temperature setting:Number>

Note: See "Error list" for any response other than the above.

Setting values for <Color temperature setting:Number> are -17 to 21.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

(2) This sets the currently selected input signal and image mode.

Example

(Setting)

> COLOR_TEMP=3 Sets the color temperature to +3.
< i:OK

(Reference)

> GET=COLOR_TEMP References the color temperature.
< g:COLOR_TEMP=3

Note: '>' indicates a command; '<' indicates a response.

COMVER

User command version inquiry

Format

Setting	Command	—
	Response	—
Reference	Command	GET=COMVER
	Response	g:COMVER="<User command version:Character string>

Note: See "Error list" for any response other than the above.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	Yes	Yes	Yes	Yes	No	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Remarks

- (1) User command version consists of <2-digit number> and <4-digit number>. (Example "01.1234")

Example

```
> GET=COMVER
< g:COMVER="01.1234"
```

Note: '>' indicates a command; '<' indicates a response.

CONT

Contrast setting

Format

Setting	Command	CONT=<Contrast setting:Number>
	Response	i:OK
Reference	Command	GET=CONT
	Response	g:CONT=<Contrast setting:Number>

Note: See "Error list" for any response other than the above.

Setting values for <Contrast setting:Number> are -20 to 20.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)
 > CONT=3 Sets the contrast to +3.
 < i:OK

(Reference)
 > GET=CONT References the contrast.
 < g:CONT=3

Note: '>' indicates a command; '<' indicates a response.

DATE_FORMAT

Date display format

Format

Setting	Command	DATE_FORMAT=<Date display format setting parameter:ID>
	Response	i:OK
Reference	Command	GET=DATE_FORMAT
	Response	g:DATE_FORMAT=<Date display format setting parameter:ID>

Note: See "Error list" for any response other than the above.

<Date display format setting parameter:ID>

Parameter	Meaning
YMD	Year/month/day
MDY	Month/day/year
DMY	Day/month/year

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM				ON
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

> DATE_FORMAT=YMD Sets the date display format setting to year/month/day.
 < i:OK

(Reference)

> GET=DATE_FORMAT References the date display format setting.
 < g:DATE_FORMAT=YMD

Note: '>' indicates a command; '<' indicates a response.

DATE_TIME

Date/time setting

Format

Setting	Command	DATE_TIME=<Year:number>, <Month:number>, <Day:number>, <Hour:number>, <Minute:number>, <Second:number>
	Response	i:OK
Reference	Command	GET=DATE_TIME
	Response	g:DATE_TIME=<Year:number>, <Month:number>, <Day:number>, <Hour:number>, <Minute:number>, <Second:number>

Note: See "Error list" for any response other than the above.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) The order of the text that can be acquired is fixed regardless of the "date display format" setting.

Example

(Setting)

> DATE_TIME=2017,01,01,10,00,00

Sets the date/time setting to 2017, January 1, 10:00:00.

< i:OK

(Reference)

> GET=DATE_TIME

References the date/time setting.

< g:DATE_TIME=2017,01,01,10,00,00

Note: '>' indicates a command; '<' indicates a response.

DCONT

Dynamic contrast

Format

Setting	Command	DCONT=<Dynamic contrast setting parameter:ID>
	Response	i:OK
Reference	Command	GET=DCONT
	Response	g:DCONT=<Dynamic contrast setting parameter:ID>

Note: See "Error list" for any response other than the above.

<Dynamic contrast setting parameter:ID>

Parameter	Meaning
OFF	OFF
MODE1	Mode 1
MODE2	Mode 2
MODE3	Mode 3

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

> DCONT=MODE1 Sets the dynamic contrast function to mode 1.
< i:OK

(Reference)

> GET=DCONT References the dynamic contrast function status.
< g:DCONT=MODE1

Note: '>' indicates a command; '<' indicates a response.

DGAMMA

Dynamic gamma

Format

Setting	Command	DGAMMA=<Dynamic gamma setting parameter:ID>
	Response	i:OK
Reference	Command	GET=DGAMMA
	Response	g:DGAMMA=<Dynamic gamma setting parameter:ID>

Note: See "Error list" for any response other than the above.

< Dynamic gamma setting parameter:ID >

Parameter	Meaning
OFF	Turned off
WEAK	Weak
MIDDLE	Middle
STRONG	Strong

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

> DGAMMA=WEAK Sets the dynamic gamma function to Weak.
< i:OK

(Reference)

> GET=DGAMMA References the dynamic gamma function status.
< g:DGAMMA=WEAK

Note: '>' indicates a command; '<' indicates a response.

ERR

Error information inquiry

Format

Setting	Command	—
	Response	—
Reference	Command	GET=ERR
	Response	g:ERR=<ErrorID:Character string>

Note: See "Error list" for any response other than the above.

<ErrorID:Character string>

Parameter	Meaning
NO_ERROR	No error
ABNORMAL_TEMPERATURE	Temperature error
FAULTY_LIGHT	Light error
FAULTY_COOLING_FAN	Cooling fan error
FAULTY_POWER_SUPPLY	Power supply error
FAULTY_AIR_FILTER	Air filter error
FAULTY_POWER_ZOOM	Zoom error
FAULTY_POWER_FOCUS	Focus error
FAULTY_POWER_LENS_SHIFT	Lens shift error
FAULTY_LENS_SHIFT_CONNECTOR	Lens shift connector error

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	Yes	Yes	Yes	Yes	No	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Remarks

- Information when the warning LED of the projector is flashing can be obtained.
NO_ERROR is returned when the warning LED is not lighted.

Example

```
>GET=ERR
<g:ERR=NO_ERROR
```

Note: '>' indicates a command; '<' indicates a response.

FINE_GAMMA_R

Fine gamma (R)

Format

Setting	Command	FINE_GAMMA_R=<Fine gamma (R) adjustment point 1 adjustment value:Number>,<Fine gamma (R) adjustment point 2 adjustment value:Number> . . . ,<Fine gamma (R) adjustment point n adjustment value:Number>
	Response	i:OK
Reference	Command	GET=FINE_GAMMA_R
	Response	g: FINE_GAMMA_R=<Fine gamma (R) adjustment point 1 adjustment value:Number>,<Fine gamma (R) adjustment point 2 adjustment value:Number> . . . ,<Fine gamma (R) adjustment point n adjustment value:Number>

Note: See "Error list" for any response other than the above.

Adjustment values for <Fine gamma (R) adjustment point n adjustment value:Number> are 0 to 1024.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.
- (2) In the projector menu, the difference between adjustment point 1 and adjustment point 9 is controlled so that it is 128 or greater, but this limitation does not apply to settings specified from user commands.

Example

(Setting)

> FINE_GAMMA_R=0,128,256,384,512,640,768,896,1024
< i:OK

Sets fine gamma (R).

(Reference)

> GET=FINE_GAMMA_R
< g:FINE_GAMMA_R=9:0,128,256,384,512,640,768,896,1024

References the fine gamma adjustment value (R).

Note: '>' indicates a command; '<' indicates a response.

FINE_GAMMA_G

Fine gamma (G)

Format

Setting	Command	FINE_GAMMA_G=<Fine gamma (G) adjustment point 1 adjustment value:Number>,<Fine gamma (G) adjustment point 2 adjustment value:Number> . . . ,<Fine gamma (G) adjustment point n adjustment value:Number>
	Response	i:OK
Reference	Command	GET=FINE_GAMMA_G
	Response	g: FINE_GAMMA_G=<Fine gamma (G) adjustment point 1 adjustment value:Number>,<Fine gamma (G) adjustment point 2 adjustment value:Number> . . . ,<Fine gamma (G) adjustment point n adjustment value:Number>

Note: See "Error list" for any response other than the above.

Adjustment values for <Fine gamma (R) adjustment point n adjustment value:Number> are 0 to 1024.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.
- (2) In the projector menu, the difference between adjustment point 1 and adjustment point 9 is controlled so that it is 128 or greater, but this limitation does not apply to settings specified from user commands.

Example

(Setting)

> FINE_GAMMA_G=0,128,256,384,512,640,768,896,1024

< i:OK

Sets fine gamma (G).

(Reference)

> GET=FINE_GAMMA_G

< g:FINE_GAMMA_G=9:0,128,256,384,512,640,768,896,1024

References the fine gamma adjustment value (G).

Note: '>' indicates a command; '<' indicates a response.

FINE_GAMMA_B

Fine gamma (B)

Format

Setting	Command	FINE_GAMMA_B=<Fine gamma (B) adjustment point 1 adjustment value:Number>,<Fine gamma (B) adjustment point 2 adjustment value:Number>, . . . ,<Fine gamma (B) adjustment point n adjustment value:Number>
	Response	i:OK
Reference	Command	GET=FINE_GAMMA_B
	Response	g: FINE_GAMMA_B=<Fine gamma (B) adjustment point 1 adjustment value:Number>,<Fine gamma (B) adjustment point 2 adjustment value:Number>, . . . ,<Fine gamma (B) adjustment point n adjustment value:Number>

Note: See "Error list" for any response other than the above.

Adjustment values for <Fine gamma (R) adjustment point n adjustment value:Number> are 0 to 1024.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.
- (2) In the projector menu, the difference between adjustment point 1 and adjustment point 9 is controlled so that it is 128 or greater, but this limitation does not apply to settings specified from user commands.

Example

(Setting)

> FINE_GAMMA_B=0,128,256,384,512,640,768,896,1024

Sets fine gamma (B).

< i:OK

(Reference)

> GET=FINE_GAMMA_B

References the fine gamma

< g:FINE_GAMMA_B=9:0,128,256,384,512,640,768,896,1024

adjustment value (B).

Note: '>' indicates a command; '<' indicates a response.

FLTWRN

Air filter warning

Format

Setting	Command	FLTWRN=<Filter warning parameter:ID>
	Response	i:OK
Reference	Command	GET= FLTWRN
	Response	g: FLTWRN=<Filter warning parameter:ID>

Note: See "Error list" for any response other than the above.

FLTWRN=<Filter warning parameter:ID>

Parameter	Meaning
OFF	Turned off
ON	Turned on

Environment

Powe mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>FLTWRN=OFF Turns the air filter warning display OFF.

< i:OK

(Reference)

>GET=FLTWRN References the air filter warning display status.

< g:FLTWRN=OFF

Note: '>' indicates a command; '<' indicates a response.

FREEZE

Screen freeze

Format

Setting	Command	FREEZE=<FREEZE parameter:ID>
	Response	i:OK
Reference	Command	GET= FREEZE
	Response	g: FREEZE=<FREEZE parameter:ID>

Note: See "Error list" for any response other than the above.

< FREEZE parameter:ID >

Parameter	Meaning
ON	On
OFF	Off

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	No

Example

(Setting)

>FREEZE=ON Sets the screen to a frozen status.
< i:OK

(Reference)

>GET=FREEZE References the current screen frozen status.
< g:FREEZE=ON

Note: '>' indicates a command; '<' indicates a response.

GAMMA

Gamma adjustment

Format

Setting	Command	GAMMA=<Gamma adjustment:Number>
	Response	i:OK
Reference	Command	GET=GAMMA
	Response	g: GAMMA=<Gamma adjustment:Number>

Note: See "Error list" for any response other than the above.

Setting values for <Gamma adjustment: Number> are -10 to 10.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

>GAMMA=-1 Sets gamma adjustment to -1.
< i:OK

(Reference)

>GET=GAMMA References the gamma adjustment.
< g:GAMMA=-1

Note: '>' indicates a command; '<' indicates a response.

HDMIIn_EDID

HDMIIn_EDID mode

Format

Setting	Command	HDMIIn_EDID=<HDMI_EDID mode setting parameter:ID> Note: n is either 1 or 2.
	Response	i:OK
Reference	Command	GET=HDMIIn_EDID Note: n is either 1 or 2.
	Response	g:HDMIIn_EDID=<HDMI_EDID mode setting parameter:ID>

Note: See "Error list" for any response other than the above.

<HDMI_EDID mode setting parameter:ID>

Parameter	Meaning
WIDE	Wide band (4K 60 Hz)
HCOMP	High compatibility

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

> HDMI1_EDID=WIDE Sets the HDMI-1 EDID mode to wide band (4K 60 Hz).
 < i:OK

(Reference)

> GET=HDMI1_EDID References the HDMI-1 EDID mode setting status.
 < g:HDMI1_EDID=WIDE

Note: '>' indicates a command; '<' indicates a response.

HDR

HDR setting

Format

Setting	Command	HDR=<HDR setting parameter:ID>
	Response	i:OK
Reference	Command	GET=HDR
	Response	g:HDR=<HDR setting parameter:ID>

Note: See "Error list" for any response other than the above.

<HDR setting parameter:ID>

Parameter	Meaning
AUTO	Automatic setting
OFF	OFF
ON	ON

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	No	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

> HDR=AUTO Sets the HDR setting to AUTO.
 < i:OK

(Reference)

> GET=HDR References the setting status of the HDR setting.
 < g:HDR=AUTO

Note: '>' indicates a command; '<' indicates a response.

HDR_RANGE

HDR range

Format

Setting	Command	HDR_RANGE=<HDR range setting value:number>
	Response	i:OK
Reference	Command	GET=HDR_RANGE
	Response	g:HDR_RANGE=<HDR range setting value:number>

Note: See "Error list" for any response other than the above.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	No	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

> HDR_RANGE=100 Sets the HDR range to 100.
 < i:OK

(Reference)

> GET=HDR_RANGE References the HDR range.
 < g:HDR_RANGE=100

Note: '>' indicates a command; '<' indicates a response.

HTMPINF

High temperature caution display

Format

Setting	Command	HTMPINF=<High temperature caution display setting parameter:ID>
	Response	i:OK
Reference	Command	GET= HTMPINF
	Response	g:HTMPINF=<High temperature caution display setting parameter:ID>

Note: See "Error list" for any response other than the above.

<High temperature caution display setting parameter:ID>

Parameter	Meaning
ON	Turned on
OFF	Turned off

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>HTMPINF=ON Turns the high temperature caution display to ON.
< i:OK

(Reference)

>GET=HTMPINF References the high temperature caution display setting status.
< g:HTMPINF=ON

Note: '>' indicates a command; '<' indicates a response.

HUE

Hue setting

Format

Setting	Command	HUE=<Hue setting value:Number>
	Response	i:OK
Reference	Command	GET= HUE
	Response	g:HUE=<Hue setting value:Number>

Note: See "Error list" for any response other than the above.

Setting values for <Hue setting value:Number> are -20 to 20.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			Input		
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)
 >HUE=8 Sets the hue to +8.
 < i:OK

(Reference)
 >GET=HUE References the hue.
 < g:HUE=1

Note: '>' indicates a command; '<' indicates a response.

IMAGE

Image mode setting

Format

Setting	Command	IMAGE=<Image mode setting parameter:ID>
	Response	i:OK
Reference	Command	GET= IMAGE
	Response	g: IMAGE=<Image mode setting parameter:ID>

Note: See "Error list" for any response other than the above.

<Image mode setting parameter:ID>

Parameter	Meaning
STANDARD	Standard
PRESENTATION	Presentation
PHOTO_SRGB	Photo/sRGB
DCM_SIM	DICOM Sim
DYNAMIC	Dynamic
VIDEO	Video
USER_1	User 1
USER_2	User 2
USER_3	User 3

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) When Image Mode setting is changed, the following set of setting items are reapplied as these sets are unique to the individual image modes.

Example

(Setting)

>IMAGE=STANDARD Sets the image mode to "Standard".
< i:OK

(Reference)

>GET=IMAGE References the current image mode.
< g:IMAGE=STANDARD

Note: '>' indicates a command; '<' indicates a response.

IMAGEFLIP

Flip display

Format

Setting	Command	IMAGEFLIP=<Image flip setting parameters:ID>
	Response	i:OK
Reference	Command	GET= IMAGEFLIP
	Response	g: IMAGEFLIP=<Image flip setting parameters:ID>

Note: See "Error list" for any response other than the above.

< Image flip setting parameters:ID >

Parameter	Meaning
NONE	None
CEILING	Ceiling mount (upside down and right side left)
REAR	Rear (right side left)
REAR_CEILING	Rear, ceiling mount (upside down)

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) When the display is flipped, the "keystone distortion" settings are initialized.

Example

(Setting)

>IMAGEFLIP=REAR Displays the rear (right side left) of the screen.
< i:OK

(Reference)

>GET=IMAGEFLIP References the flip display status.
< g:IMAGEFRIP=REAR_CEILING

Note: '>' indicates a command; '<' indicates a response.

INPUT

Input signal selection

Format

Setting	Command	INPUT=<Input selection parameters:ID>
	Response	i:OK
Reference	Command	GET= INPUT
	Response	g: INPUT=<Input selection parameters:ID>

Note: See "Error list" for any response other than the above.

< Input selection parameters:ID >

Parameter	Meaning
HDMI1	HDMI-1
HDMI2	HDMI-2
HDMI1X2	HDMI 1X2
D-RGB1	DVI-1
D-RGB2	DVI-2
D-RGB3	DVI-3
D-RGB4	DVI-4
D-RGB1X2	DVI 1X2
D-RGB2X2	DVI 2X2
D-RGB1X4	DVI 1X4

Environment

Powe mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>INPUT=D-RGB1 Selects Digital PC-1 input.
 < i:OK

(Reference)

>GET=INPUT References the input signal.
 < g:INPUT=D-RGB1

Note: '>' indicates a command; '<' indicates a response.

IRIS

Iris setting

Format

Setting	Command	IRIS=<Iris setting parameters:ID>
	Response	i:OK
Reference	Command	GET= IRIS
	Response	g: IRIS=<Iris setting parameters:ID>

Note: See "Error list" for any response other than the above.

< Iris setting parameters:ID >

Parameter	Meaning
OPEN	Open
CLOSE1	Close 1
CLOSE2	Close 2
CLOSE3	Close 3

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

> IRIS=OPEN Sets the iris to Open.
 < i:OK

(Reference)

>GET=IRIS References the iris setting.
 < g:IRIS=OPEN

Note: '>' indicates a command; '<' indicates a response.

KREP

Key repeat

Format

Setting	Command	KREP=<Key repeat parameter:ID>
	Response	i:OK
Reference	Command	GET=KREP
	Response	g:KREP=<Key repeat parameter:ID>

Note: See "Error list" for any response other than the above.

<Key repeat parameter:ID>

Parameter	Meaning
OFF	Turned off
ON	Turned on

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>KREP=OFF Turns the key repeat setting OFF.

< i:OK

(Reference)

>GET=KREP References the key repeat setting.

< g:KREP=OFF

Note: '>' indicates a command; '<' indicates a response.

LIGHT

Light source mode

Format

Setting	Command	LIGHT=<Light source mode setting parameter:ID>
	Response	i:OK
Reference	Command	GET=LIGHT
	Response	g:LIGHT=<Light source mode setting parameter:ID>

Note: See "Error list" for any response other than the above.

<Light source mode setting parameter:ID>

Parameter	Meaning
NORMAL	Normal
SILENT1	Silent 1
SILENT2	Silent 2
CUSTOM	Adjustment

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.
- (2) This can be set only when the operation mode is "Normal".

Example

(Setting)

> LIGHT=NORMAL Sets the light source mode to "Normal".
 < i:OK

(Reference)

> GET=LIGHT References the light source mode.
 < g:LIGHT=NORMAL

Note: '>' indicates a command; '<' indicates a response.

LIGHTLV

Light level

Format

Setting	Command	LIGHTLV=<Light level setting value:number>
	Response	i:OK
Reference	Command	GET=LIGHTLV
	Response	g:LIGHTLV=<Light level setting value:number>

Note: See "Error list" for any response other than the above.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			Input		
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected operation mode, input signal and image mode.
- (2) For the light level setting value, specify a value obtained by multiplying the setting value in the menu by 10x.
- (3) The valid value range of <Light level setting value:number> changes according to the current operation mode.

Operation mode	Valid value range
Normal	200~1000
Fixed brightness	200~640
Long duration 1	200~640
Long duration 2	200~400

Example

(Setting)

> LIGHTLV=400 Sets the light level to 40.0.
< i:OK

(Reference)

> GET=LIGHTLV References the light level.
< g:LIGHTLV=400

Note: '>' indicates a command; '<' indicates a response.

LPOSLD

Lens-position load

Format

Setting	Command	LPOSLD=<Lens-position load setting parameter: ID>
	Response	i:OK
Reference	Command	-
	Response	-

Note: See "Error list" for any response other than the above.

<Lens-position load setting parameter: ID>

Parameter	Meaning
1	Position load 1
2	Position load 2
3	Position load 3

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This parameter cannot be set when position save has not been executed.
- (2) This is not a user command to execute position save. Execute it from the menu.

Example

```
>LPOSLD=1           Executes position load 1.
< i:OK
```

Note: '>' indicates a command; '<' indicates a response.

MAIN

Unit control panel emulation

Format

Setting	Command	MAIN=<Side control emulation button parameters:ID>
	Response	i:OK
Reference	Command	-
	Response	-

Note: See "Error list" for any response other than the above.

< Side control emulation button parameters:ID >

Operation	Parameter	Remarks
POWER	POWER	
-	POWER_OFF	Power OFF
MENU	MENU	
INPUT	INPUT	
AUTOPC	AUTOPC	
KEystone	KEystone	
UP	UP	
	UP+REP	Button press start
DOWN	DOWN	
	DOWN +REP	Button press start
LEFT	LEFT	
	LEFT +REP	Button press start
RIGHT	RIGHT	
	RIGHT +REP	Button press start
OK	OK	
-	*-REP	Button press end

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	Yes	Yes	Yes	Yes	No	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Remarks

- Parameters with "+REP" indicates "Button press start" (same state as when the front panel button is held down). Be absolutely sure to send the '*-REP' parameter, and end the button pressing last of all.
The button pressing is ended in the cases below as well.
When buttons on the panel or the remote are operated
When some command has been received
- When ceiling mount setting is made, functions of UP/DOWN/LEFT/RIGHT buttons on the unit control panel are reversed. But the "MAIN" command's UP/DOWN/LEFT/RIGHT are unaffected and always work in the same way as when installed on the floor.
- Adjust the time between each button press using the application.
- When a button press request is accepted properly, the projector returns "i:OK" even when the function is inexecutable.
(This response is the same also for POWER_OFF parameters. The projector returns "i:OK" as an indication that the power-off request was accepted but does not return information as to whether power-off was actually executed.)

- (5) When a button press request is accepted properly, the projector will behave in the same manner as when the button on the unit control panel is pressed.
- (6) All parameters except "Power" are invalid during standby mode.

■ Example

(Setting)

>MAIN=MENU

< i:OK

Note: '>' indicates a command; '<' indicates a response.

MEMF

Memory color adjustment (flesh)

Format

Setting	Command	MEMF=<Memory color adjustment parameter:ID>
	Response	i:OK
Reference	Command	GET=MEMF
	Response	g:MEMF=<Memory color adjustment parameter:ID>

Note: See "Error list" for any response other than the above.

< Memory color adjustment parameter:ID >

Parameter	Meaning
OFF	Turned off
WEAK	Weak
MIDDLE	Middle
STRONG	Strong

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

(3) This sets the currently selected input signal and image mode.

Example

(Control)

>MEMF=MIDDLE Sets the memory color adjustment (flesh) to Middle.
< i:OK

(Reference)

> GET=MEMF References the memory color adjustment (flesh).
< g:MEMF=MIDDLE

Note: '>' indicates a command; '<' indicates a response.

MEMG

Memory color adjustment (green)

Format

Setting	Command	MEMG=<Memory color adjustment parameter:ID>
	Response	i:OK
Reference	Command	GET=MEMG
	Response	g:MEMG=<Memory color adjustment parameter:ID>

Note: See "Error list" for any response other than the above.

< Memory color adjustment parameter:ID >

Parameter	Meaning
OFF	Turned off
WEAK	Weak
MIDDLE	Middle
STRONG	Strong

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Control)

>MEMG=MIDDLE Sets the memory color adjustment (green) to Middle.
< i:OK

(Reference)

> GET=MEMG References the memory color adjustment (green).
< g:MEMG=MIDDLE

Note: '>' indicates a command; '<' indicates a response.

MEMS

Memory color adjustment (sky)

Format

Setting	Command	MEMS=<Memory color adjustment parameter:ID>
	Response	i:OK
Reference	Command	GET=MEMS
	Response	g:MEMS=<Memory color adjustment parameter:ID>

Note: See "Error list" for any response other than the above.

< Memory color adjustment parameter:ID >

Parameter	Meaning
OFF	Turned off
WEAK	Weak
MIDDLE	Middle
STRONG	Strong

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Control)

>MEMS=MIDDLE Sets the memory color adjustment (sky) to Middle.
< i:OK

(Reference)

> GET=MEMS References the memory color adjustment (sky).
< g:MEMS=MIDDLE

Note: '>' indicates a command; '<' indicates a response.

MENU_RT

Menu rotation

Format

Setting	Command	MENU_RT=<Menu rotation setting parameter:ID>
	Response	i:OK
Reference	Command	GET=MENU_RT
	Response	g:MENU_RT=<Menu rotation setting parameter:ID>

Note: See "Error list" for any response other than the above.

<Menu rotation setting parameter:ID>

Parameter	Meaning
AUTO	AUTO
NONE	OFF
90L	Left 90°
90R	Right 90°

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

> MENU_RT=AUTO Sets the menu rotation setting to AUTO.
 < i:OK

(Reference)

> GET=MENU_RT References the setting status of the menu rotation setting.
 < g:MENU_RT=AUTO

Note: '>' indicates a command; '<' indicates a response.

MUTE

Audio mute

Format

Setting	Command	MUTE=<Mute control parameter:ID>
	Response	i:OK
Reference	Command	GET=MUTE
	Response	g:MUTE=<Mute control parameter:ID>

Note: See "Error list" for any response other than the above.

< Mute control parameter:ID>

Parameter	Meaning
ON	Disables the audio/beep sound.
OFF	Enables the audio/beep sound.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) Mute setting is always set to "OFF" after the projector is turned on.
- (2) Audio mute is canceled if audio volume is adjusted when audio mute is enabled.

Example

(Setting)

```
>MUTE=ON           Suppresses the audio output.
< i:OK
```

(Reference)

```
> GET=MUTE         References the audio output status.
< g:MUTE=ON
```

Note: '>' indicates a command; '<' indicates a response.

NR
Random noise reduction

Format

Setting	Command	NR=<Random noise reduction setting parameter:ID>
	Response	i:OK
Reference	Command	GET=NR
	Response	g: NR=<Random noise reduction setting parameter:ID>

Note: See "Error list" for any response other than the above.

<Random noise reduction setting parameter:ID>

Parameter	Meaning
OFF	Turned off
WEAK	Weak
MIDDLE	Middle
STRONG	Strong

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

(1) This sets the currently selected input signal and image mode.

Example

(Setting)

>NR=MIDDLE Sets the random noise reduction function to Middle.
< i:OK

(Reference)

> GET=NR References the random noise reduction function status.
< g:NR=MIDDLE

Note: '>' indicates a command; '<' indicates a response.

NRMPG

MPEG noise reduction

Format

Setting	Command	NRMPG=<MPEG noise reduction setting parameter:ID>
	Response	i:OK
Reference	Command	GET=NRMPG
	Response	g:NRMPG=<MPEG noise reduction setting parameter:ID>

Note: See "Error list" for any response other than the above.

< MPEG noise reduction setting parameter:ID >

Parameter	Meaning
OFF	Turned off
WEAK	Weak
MIDDLE	Middle
STRONG	Strong

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

>NRMPG=MIDDLE Sets the MPEG noise reduction function to Middle.
< i:OK

(Reference)

> GET=NRMPG References the MPEG noise reduction function status.
< g:NRMPG=MIDDLE

Note: '>' indicates a command; '<' indicates a response.

OPMODE

Operation mode

Format

Setting	Command	OPMODE=<Operation mode setting parameter:ID>
	Response	i:OK
Reference	Command	GET=OPMODE
	Response	g:OPMODE=<Operation mode setting parameter:ID>

Note: See "Error list" for any response other than the above.

<Operation mode setting parameter:ID>

Parameter	Meaning
NORMAL	Normal
CONST	Fixed brightness
LONG1	Long duration 1
LONG2	Long duration 2

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

> OPMODE=NORMAL Sets the operation mode to "Normal".
 < i:OK

(Reference)

> GET=OPMODE References the operation mode.
 < g:OPMODE=NORMAL

Note: '>' indicates a command; '<' indicates a response.

PJUSGT

Projector usage time query

Format

Setting	Command	-
	Response	-
Reference	Command	GET=PJUSGT
	Response	g:PJUSGT=<Projector usage time:number>

Note: See "Error list" for any response other than the above.

Environment

Powe mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	Yes	Yes	Yes	Yes	No	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Remarks

- (1) The unit of projector usage time is "hours".

Example

```
(Control)
> GET=PJUSGT
< g:PJUSGT=10
```

Note: '>' indicates a command; '<' indicates a response.

POWER

Power supply control

Format

Setting	Command	POWER=<power control parameter:ID>
	Response	i:OK
Reference	Command	GET= POWER
	Response	g: POWER = < Power mode parameter:ID >

Note: See "Error list" for any response other than the above.

< Power control parameter:ID >

Parameter	Meaning
ON	Power ON
OFF	Power OFF

< Power mode parameter:ID >

Parameter	Meaning
OFF	Power OFF
OFF2ON	OFF -> ON in transition
ON	Power ON
ON2PMM	ON -> Lamp OFF in transition
PMM	Lamp OFF
PMM2ON	Lamp OFF -> ON in transition
ON2OFF	ON -> OFF in transition

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	Yes	Yes	Yes	Yes	No	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Remarks

- (1) Lamp Replacement Preparation, "Lamp Replacement Warning," and "Air Filter Cleaning Warning" are displayed for 10 seconds, regardless of whether the projector was started by the button or command.
- (2) Note that there are different parameters for the setting command and the reference command.

Example

(Control)

```
>POWER=ON
<i:OK
```

(Reference)

```
>GET=POWER
< g:POWER=OFF
```

Note: '>' indicates a command; '<' indicates a response.

PRODCODE

Product name inquiry

Format

Setting	Command	-
	Response	-
Reference	Command	GET= PRODCODE
	Response	g: PRODCODE="<Product name:Character string>

Note: See "Error list" for any response other than the above.

< Product name:Character string >

Parameter	Meaning
4K600STZ	4K600STZ

Environment

Powe mode restriction												Input			
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	Yes	Yes	Yes	Yes	No	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Example

```
>GET=PRODCODE
< g:PRODCODE="4K600STZ"
```

Note: '>' indicates a command; '<' indicates a response.

QSTRT

High-speed start

Format

Setting	Command	QSTRT=<High-speed start setting parameter:ID>
	Response	i:OK
Reference	Command	GET=QSTRT
	Response	g:QSTRT=<High-speed start setting parameter:ID>

Note: See "Error list" for any response other than the above.

<High-speed start setting parameter:ID>

Parameter	Meaning
OFF	OFF
ON	ON

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

> QSTRT=ON Sets the network function (wired) to "ON".
 < i:OK

(Reference)

> GET=QSTRT References the network function (wired).
 < g:QSTRT=ON

Note: '>' indicates a command; '<' indicates a response.

RC

Remote control operation emulate

Format

Setting	Command	RC=<Remote control emulation button parameters:ID>
	Response	i:OK
Reference	Command	-
	Response	-

Note: See "Error list" for any response other than the above.

< Remote control emulation button parameters:ID >

Operation	Parameter	Remarks
POWER	POWER	
-	POWER_OFF	Power OFF
MENU	MENU	
EXIT	EXIT	
INPUT	INPUT	
DIGITAL	DPC	
ANALOG PC1	APC1	
ANALOG PC2	APC2	
HDMI	HDMI	
COMPONENT	COMP	
ASPECT	ASPECT	
AUTOPC	AUTOPC	
UP	UP	
	UP+REP	Button press start
DOWN	DOWN	
	DOWN+REP	Button press start
LEFT	LEFT	
	LEFT+REP	Button press start
RIGHT	RIGHT	
	RIGHT+REP	Button press start
OK	OK	
FOCUS	FOCUS	
ZOOM	ZOOM	
SHIFT	SHIFT	
TEST PATTERN	TPTN	
KEystone	KEYSTONE	
0	NUM_0	
1	NUM_1	
2	NUM_2	
3	NUM_3	
4	NUM_4	
5	NUM_5	
6	NUM_6	
7	NUM_7	
8	NUM_8	
9	NUM_9	
DZOOM +	DZOOM_P	
	DZOOM_P+REP	Button press start

DZOOM -	DZOOM_M	
	DZOOM_M+REP	Button press start
VOL +	VOL_P	
VOL +	VOL_P+REP	Button press start
VOL -	VOL_M	
VOL -	VOL_M+REP	Button press start
MUTE	MUTE	
FN	FN	
IMAGE	IMAGE	
FREEZE	FREEZE	
BLANK	BLANK	
GAMMA	GAMMA	
SPLIT	SPLIT	
ECO	ECO	
-	*-REP	Button press end

Environment

Power mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	Yes	Yes	Yes	Yes	No	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Remarks

- (1) A parameter with '+REP' signifies "button press start". (This is the same as the status in which the remote control button is held down.)
 When executing these commands, be sure to send '*-REP' at the end to finish the button press.
 The button pressing is ended in the cases below as well.
 When buttons on the panel or the remote are operated
 When some command has been received
- (2) When a button press request is accepted properly, "i:OK" is returned.
 (without notifying the resulting execution of button operation)
 (This response is the same also for POWER_OFF parameters. The projector returns "i:OK" as an indication that the power-off request was accepted but does not return information as to whether power-off was actually executed.)
- (3) When a button press request is accepted properly, the projector will behave in the same manner as when the remote key is pressed.

Example

```
(Setting)
>RC=POWER
< i:OK
```

Note: '>' indicates a command; '<' indicates a response.

RGBGAIN

RGB gain adjustment

Format

Setting	Command	RGBGAIN=<R gain setting:Number>,<G gain setting:Number>,<B gain setting:Number>
	Response	i:OK
Reference	Command	GET=RGBGAIN
	Response	g:RGBGAIN=<R gain setting:Number>,<G gain setting:Number>,<B gain setting:Number>

Note: See "Error list" for any response other than the above.

Setting values for <R/G/B gain setting:Number> are -60 to 60.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

>RGBGAIN=10,11,12 Sets the R gain to 10, G gain to 11 and B gain to 12.

< i:OK

(Reference)

> GET=RGBGAIN References the RGB gain.

< g:RGBGAIN=-10,0,19

Note: '>' indicates a command; '<' indicates a response.

RGBOFFSET

RGB offset adjustment

Format

Setting	Command	RGBOFFSET=<R offset setting:Number>,<G offset setting:Number>,<B offset setting:Number>
	Response	i:OK
Reference	Command	GET=RGBOFFSET
	Response	g:RGBOFFSET=<R offset setting:Number>,<G offset setting:Number>,<B offset setting:Number>

Note: See "Error list" for any response other than the above.

Setting values for <R/G/B offset setting:Number> are -60 to 60.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)

>RGBOFFSET=10,11,12 Sets the R offset to 10, G offset to 11 and B offset to 12.

< i:OK

(Reference)

> GET=RGBOFFSET References the RGB offset.

< g:RGBOFFSET=-10,0,19

Note: '>' indicates a command; '<' indicates a response.

ROMVER

Firmware version inquiry

Format

Setting	Command	-
	Response	-
Reference	Command	GET=ROMVER
	Response	g:ROMVER="<ROM version:Character string>

Note: See "Error list" for any response other than the above.

Environment

Powe mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	Yes	Yes	Yes	Yes	No	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Example

```
> GET=ROMVER
< g:ROMVER="01.234567_12345"
```

Note: '>' indicates a command; '<' indicates a response.

SAT

Color saturation setting

Format

Setting	Command	SAT=<Color saturation setting value:Number>
	Response	i:OK
Reference	Command	GET=SAT
	Response	g:SAT=<Color saturation setting value:Number>

Note: See "Error list" for any response other than the above.

Setting values for <Color saturation setting value:Number> are -20 to 20.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)
 >SAT=-10 Sets the color saturation to -10.
 < i:OK

(Reference)
 > GET=SAT References the color saturation.
 < g:SAT=1

Note: '>' indicates a command; '<' indicates a response.

SAVEIMGPROF

User memory creation/storage/deletion

Format

Setting	Command	SAVEIMGPROF=<User memory save to parameter:ID>
	Response	i:OK
Reference	Command	GET=SAVEIMGPROF
	Response	g:SAVEIMGPROF=<Number of user memories>:<User 1 present parameter>,<User 2 present parameter>,<User 3 present parameter>'

Note: See "Error list" for any response other than the above.

< User memory save to parameter:ID >

Parameter	Meaning
USER_1	Save to User 1
USER_2	Save to User 2
USER_3	Save to User 3
DEL_ALL	Delete all User memory

< User memory presence parameter:ID >

Parameter	Meaning
0	User memory not created
1	User memory created

Environment

Powe mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

(1) After executing DEL_ALL, the status same as the status (set after execution of the factory default settings menu) is set.

Example

(Setting)

>SAVEIMGPROF=USER_2 Save the current image adjustment values to user memory 2.
< i:OK

(Reference)

> GET=SAVEIMGPROF Checks the user memory creation status.
< g:SAVEIMGPROF=3:0,1,1 User memories 2 and 3 are already created.

Note: '>' indicates a command; '<' indicates a response.

SHARP

Sharpness setting

Format

Setting	Command	SHARP=<Sharpness setting:Number>
	Response	i:OK
Reference	Command	GET=SHARP
	Response	g:SHARP=<Sharpness setting:Number>

Note: See "Error list" for any response other than the above.

Setting values for <Sharpness setting:Number> are -10 to 10.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			Input		
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This sets the currently selected input signal and image mode.

Example

(Setting)
 >SHARP=3 Sets the sharpness to 3.
 < i:OK

(Reference)
 > GET=SHARP References the sharpness.
 < g:SHARP=3

Note: '>' indicates a command; '<' indicates a response.

SIGMSG

Input status display

Format

Setting	Command	SIGMSG=<Input status display setting parameter:ID>
	Response	i:OK
Reference	Command	GET=SIGMSG
	Response	g:SIGMSG=<Input status display setting parameter:ID>

Note: See "Error list" for any response other than the above.

<Input status display setting parameter:ID>

Parameter	Meaning
ON	Turned on
OFF	Turned off

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

>SIGMSG=ON Turns the input status display to ON.

< i:OK

(Reference)

> GET=SIGMSG References the input status display setting status.

< g:SIGMSG=ON

Note: '>' indicates a command; '<' indicates a response.

SIGNAL_INFO

Displayed signal information inquiry

Format

Setting	Command	-
	Response	-
Reference	Command	GET=SIGNAL_INFO
	Response	g:SIGNAL_INFO="<Input signal information:Character string>

Note: See "Error list" for any response other than the above.

Environment

Powe mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) e:1011 FUNCTION_NOT_AVAILABLE is returned while a test pattern is displayed.

Example

```
> GET=SIGNAL_INFO
< g:SIGNAL_INFO="1920 x 1200 60"
```

Note: '>' indicates a command; '<' indicates a response.

SIGNALSTATUS

Signal detection inquiry

Format

Setting	Command	-
	Response	-
Reference	Command	GET=SIGNALSTATUS
	Response	g:SIGNALSTATUS=<Signal status:ID>

Note: See "Error list" for any response other than the above.

< Signal status parameter:ID >

Parameter	Meaning
NO_SIGNAL	Signal not detected
DISPLAYING	Image now displayed or display enable status
SETTING	Signal detection or display preparation in progress
UNSUPPORTED	An unsupported signal is being received.
INSUFFICIENT	In multi-input, the input signals are not aligned, or there is a terminal not receiving input.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This returns the signal status of the selected input.
- (2) e:1011 FUNCTION_NOT_AVAILABLE is returned during BLANK.

Example

> GET=SIGNALSTATUS To get the signal information at the bottom left of the screen
 < g:SIGNALSTATUS=NO_SIGNAL when input "DVI 2x2" is selected.

Note: '>' indicates a command; '<' indicates a response.

SNTP

SNTP setting

Format

Setting	Command	SNTP=<SNTP setting parameter:ID>
	Response	i:OK
Reference	Command	GET=SNTP
	Response	g:SNTP=<SNTP setting parameter:ID>

Note: See "Error list" for any response other than the above.

<SNTP setting parameter:ID>

Parameter	Meaning
OFF	OFF
IPV4	ON (IPv4)
IPV6	ON (IPv6)

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Remarks

- (1) This cannot be set when the network function is OFF.
- (2) Set the IP address of the SNTP server beforehand from the projector web page.

Example

(Setting)
 > SNTP=OFF Sets the SNTP setting to OFF.
 < i:OK

(Reference)
 > GET=SNTP References the SNTP setting status.
 < g:SNTP=OFF

Note: '>' indicates a command; '<' indicates a response.

TEMP

Temperature sensor value inquiry

Format

Setting	Command	-
	Response	-
Reference	Command	GET=TEMP
	Response	g:TEMP=<Number of sensors>,<Sensor 1 value>,...,<Sensor n value>

Note: See "Error list" for any response other than the above.

Environment

Powe mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	Yes	Yes	Yes	No	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Remarks

(1) There are cases when number of sensors is 0. In this case, there will not be a comma.

Example

> GET=TEMP References the temperature sensor value.
 < g:TEMP=5,28.5,53.3,53.3,53.3,33.0

Note: '>' indicates a command; '<' indicates a response.

TIME_ZONE

Time zone setting value reference

Format

Setting	Command	-
	Response	-
Reference	Command	GET=TIME_ZONE
	Response	g:TEMP="<Time zone setting value:character string>"

Note: See "Error list" for any response other than the above.

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C					
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON	D-RGB	HDMI	None
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Reference)

> GET=TIME_ZONE

References the time zone setting value.

< g:TIME_ZONE=GMT +09:00

Note: '>' indicates a command; '<' indicates a response.

TPTN

Test pattern

Format

Setting	Command	TPTN=<Test pattern parameter:ID>
	Response	i:OK
Reference	Command	GET=TPTN
	Response	g:TPTN=<Test pattern parameter:ID>

Note: See "Error list" for any response other than the above.

< Test pattern parameter:ID>

Parameter	Meaning
OFF	Turned off
CB1	Color bar
SSH1	Stair step H No.1
SSH2	Stair step H No.2
SSH3	Stair step H No.3
SSV1	Stair step V No.1
SSV2	Stair step V No.2
SSV3	Stair step V No.3
RTF1	Raster 100% White
RTF2	Raster 100% Red
RTF3	Raster 100% Green
RTF4	Raster 100% Blue
RTH1	Raster 50% White
RTH2	Raster 50% Red
RTH3	Raster 50% Green
RTH4	Raster 50% Blue
SSC1	Stair step color H
SSC2	Stair step color V
CKR1	Checker No.1
CKR2	Checker No.2
MUL1	Multi No.1
MUL2	Multi No.2
CHR1	Character
FCS1	Focus
BDR1	Border
CRS1	Cross hatch 8 divided
CRS2	Cross hatch 12 divided
CRS3	Cross hatch 4 divided
DCM1	DICOM chart

Environment

Power mode restriction													Input		
LAN					WiFi					RS-232C			D-RGB	HDMI	None
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

■ Example

(Setting)

> TPTN=OFF Turns the test pattern OFF.

< i:OK

(Reference)

> GET=TPTN References the test pattern setting.

< g:TPTN=OFF

Note: '>' indicates a command; '<' indicates a response.

TRGOUT

Trigger out setting

Format

Setting	Command	TRGOUT=<Trigger out setting parameter:ID>
	Response	i:OK
Reference	Command	GET=TRGOUT
	Response	g:TRGOUT=<Trigger out setting parameter:ID>

Note: See "Error list" for any response other than the above.

<Trigger out setting parameter:ID>

Parameter	Meaning
OFF	OFF
POWER	Power interlock

Environment

Powe mode restriction												Input			
LAN					WiFi					RS-232C		D-RGB	HDMI	None	
SL0	SL1	SL3 SFB	PM	ON	SL0	SL1	SL3 SFB	PM	ON	ST	PM	ON			
No	No	No	No	Yes	No	No	No	No	Yes	No	No	Yes	Yes	Yes	Yes

Example

(Setting)

> TRGOUT=OFF Sets the trigger out setting to OFF.

< i:OK

(Reference)

> GET=TRGOUT References the trigger out setting status.

< g:TRGOUT=OFF

Note: '>' indicates a command; '<' indicates a response.

7. Error List

Response	Description	Reaction
i:OK	The command was successfully processed.	
e:0002 INVALID_COMMAND	The command was invalid (not defined), or the command format was incorrect.	Use a correct command or correct command format.
e:000A INVALID_PARAMETER	Argument (parameter) of the command is invalid.	Use a correct argument (parameter).
e:F001 SYSTEM	An internal error occurred.	Resend the command. Note: If the error persists after repeatedly resending the command with some intervals, turn off the projector and then disconnect and reconnect the power cord before resending the command.
e:0005 NOT_POWER_SUPPLIED	The power is off.	Send the command while the power is on.
i:BUSY	Cannot execute as the projector is undergoing internal processing.	Wait for a while, and resend the command. The old items, "i: BUSY (POWER)" and "i: BUSY (Network)" have been integrated into "i:BUSY".
e:1011 FUNCTION_NOT_AVAILABLE	The operation is currently invalid. The setting cannot be made in the current status.	Take one of the following actions: <ul style="list-style-type: none"> · Return the UI state to the usual projection mode, and then resend the command. · Activate the function from the menu, and resend the command. (Commands may be deactivated by the related menu items.)
e:201F INVALID_SIGNAL	Cannot execute with the current input signal.	Execute the command when a different input signal is input.

8. Error Processing

